


PowerWave 604 User's Guide

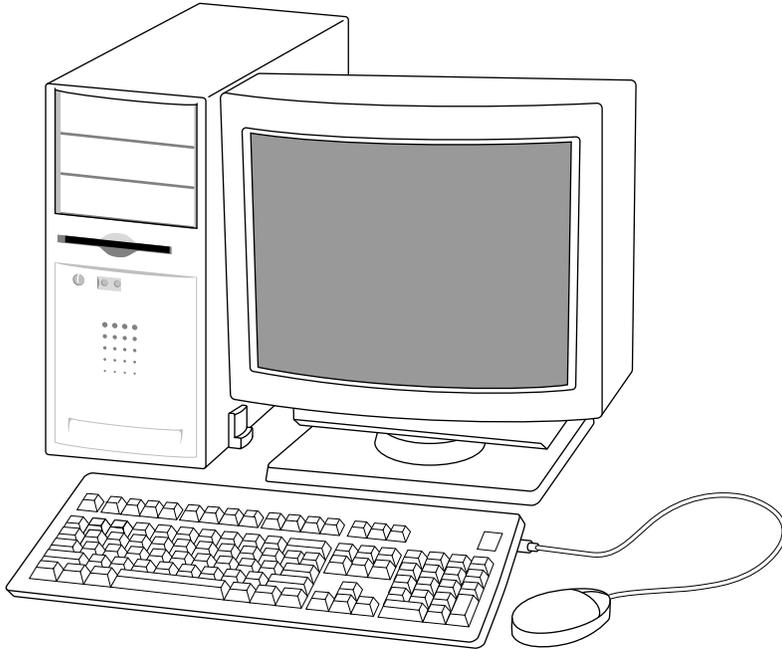

Part number 72761

Rev. number 9606 04

Power Computing Corporation

© 1995, 1996 Power Computing Corporation. All rights reserved.

Under copyright laws, this manual may not be copied, in whole or in part, without the written consent of Power Computing. Your rights to the software are governed by the accompanying software license agreement.

Power Computing Corporation
10261 Bubb Road
Cupertino, CA 95014
(408) 725-7250

Power Computing is a trademark of Power Computing Corporation. Mac and the Mac OS logo are trademarks of Apple Computer, Inc. All other trademarks mentioned are the property of their respective holders. Every effort has been made in this book to distinguish proprietary trademarks from descriptive terms by following the capitalization style used by the manufacturer.

Every effort has been made to ensure that the information in this manual is accurate. Power Computing is not responsible for printing or clerical errors.

Other legal notices are found in “Regulatory Information” on page 71.

Manual Revision 960604

Support Numbers

Customers who purchased systems directly from Power Computing please use the numbers listed below to contact Power Computing for assistance: (All times are United States Central Time.) Customers who did not purchase systems directly from Power Computing must contact the dealer they purchased their system from for assistance.

Sales	To place or check on an order you haven't received yet	M – F 8AM to 10 PM Sat 9 AM to 6 PM Sun 10 AM to 6 PM	1-800-999-7279
Customer Support	If you have a question or a problem with an order you have received	M – F 8 AM to 6 PM	1-800-671-6227
Technical Support	For help with a technical problem	M – F 8 AM to 8 PM Sat 10 AM to 4 PM	1-800-708-6227

A word from the Power Computing team

Dear New Power Computer Owner,

Thank you for choosing this Mac OS compatible computer from Power Computing Corporation. We appreciate your support. As the new kids on the block, so to speak, we've got something to prove. We think that — dollar for dollar and pound for pound — Power Computing builds the best Mac OS compatible computers in the world. So thank you for giving us this opportunity to prove it to you.

Unlike some companies, we want to hear from you. Really. Give us a call anytime (or send us e-mail at suggestionbox@powercc.com); no question is too big or small.

Even if you don't call us, a Power Computing Corporation representative will be contacting you in the next few days to make sure that everything is working to your satisfaction. In the meantime, don't hesitate to let us know if there is anything else we can do for you. And please, if there's something we could have done better, let us know that, too! Our company charter is to exceed your expectations in every way. Nothing less will do.

Enjoy your new Power Computer.

Sincerely,



The Power Computing Team

Table of Contents

PowerWave 604 User's Guide

A word from the Power Computing team	iii
PowerWave 604 Overview	ix
Desktop System Front View	ix
Desktop System Rear View	x
Tower System Front View	xi
Tower System Rear View	xii
Return, Warranty, Satisfaction Guarantee, and License Information	xiii
RETURN POLICIES	xiii
LIMITED WARRANTY	xv
CUSTOMER SATISFACTION GUARANTEE	xvi
Apple Computer, Inc. System Software License Agreement	xvii
Chapter 1 Getting Started	1
Finding a place for the computer and monitor	1
Plugging in the computer	2
Connecting the monitor	4
Connecting the mouse and keyboard	6
Turning the computer on	8
Problems starting up	8
Chapter 2 Getting Started With Mac™ OS	9
Running the Basics tutorial	9
Using on-line help	10
Shutting down	11
Sleep	12
Chapter 3 Upgrading Your Computer	13
Removing the cover	13
Installing expansion cards	17
PCI-Only	17
PCI Plus NuBus	18
Increasing memory	23
What you need to know about increasing RAM	23

Installing and Removing RAM	24
Increasing VRAM	28
Installing internal drives	30
What you need to know about installing internal drives	30
Required tools	31
Installing drives	32
Chapter 4 Connecting Peripheral Devices	43
Using SCSI devices	43
Installing software device drivers	43
Setting the SCSI ID	43
Ensuring proper termination	44
Connecting an external SCSI device	44
Connecting an internal SCSI device	45
Connecting a printer	45
Connecting input devices	46
Connecting a modem or telecom adapter	47
Connecting to a network	47
Connecting to a LocalTalk network	47
Connecting to an Ethernet network	47
Connecting to a Token Ring network	47
Using audio equipment	48
Understanding the sound ports	48
Connecting an audio device	48
Connecting external speakers	49
Connecting a microphone	50
Playing audio CDs on a CD-ROM drive	50
Appendix A Safety and Health Information	51
Safety instructions	51
Health-related information about computer use	51
Appendix B Troubleshooting	53
Restarting the computer	53
Problems and solutions	54
Contacting Technical Support	57
Appendix C Installing System Software	59
Starting up	59
Reinstalling system software	60
Appendix D Technical Information	61
Specifications	61
RAM configurations	64


VRAM configurations	65
Monitor resolution/color tables	65
Power requirements	66
Appendix E Regulatory Information	67
FCC statement	67
Radio and television interference	67
DOC statement	68
CD-ROM drive	69
Lithium battery warning	69
For use in European countries	69
Hard Disk ToolKit•Personal Edition User Guide	
Introduction	77
Installing Hard Disk ToolKit•Personal Edition	81
Installing Hard Disk ToolKit•Personal Edition	81
Creating an HDT Primer PE Startup diskette	87
Personalizing your copy of Hard Disk Toolkit•Personal Edition	89
HDT Primer PE	91
What is HDT Primer PE?	91
Using HDT Primer PE	93
HDT Primer PE Menu Commands	112
HDT Extension	115
HDT Prober	117
HDT Util	123
Troubleshooting	127
Common problems by category	127
Frequently asked questions	134
CD-ROM ToolKit User Guide	
Introduction	151
QuickStart	156
Installation and Removal Specifics	160
Instruction Guide	164
Troubleshooting	181
Technical Information and Tips	194
Glossary	207

Bitstream Typeface Library	213
Index	217
Registration Cards	225

PowerWave 604 Overview


Desktop System Front View

Here are the key features of the desktop system front panel.

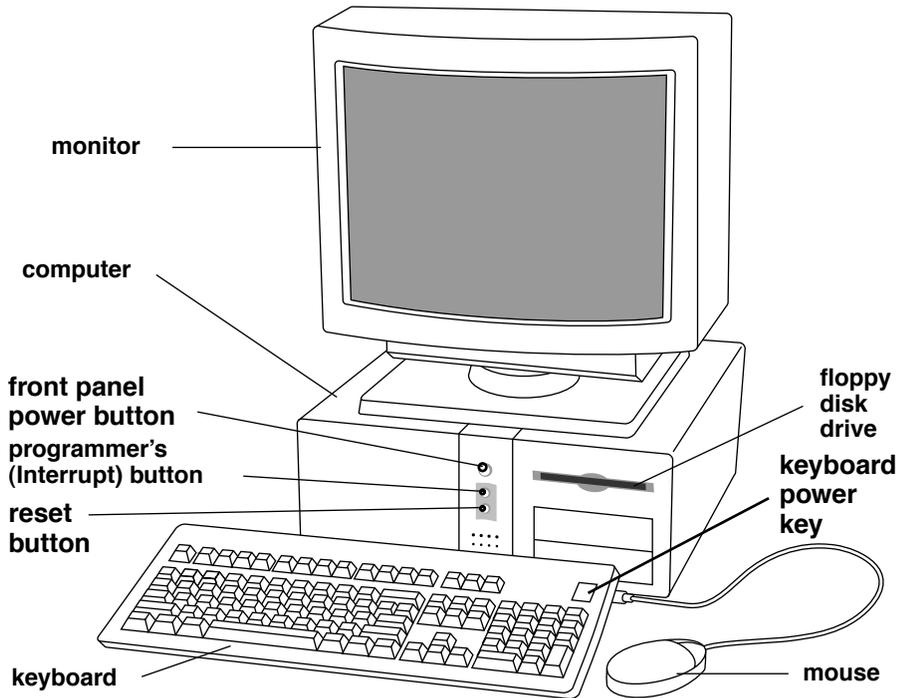


Desktop System Rear View

Here are the key components of the desktop system rear panel.

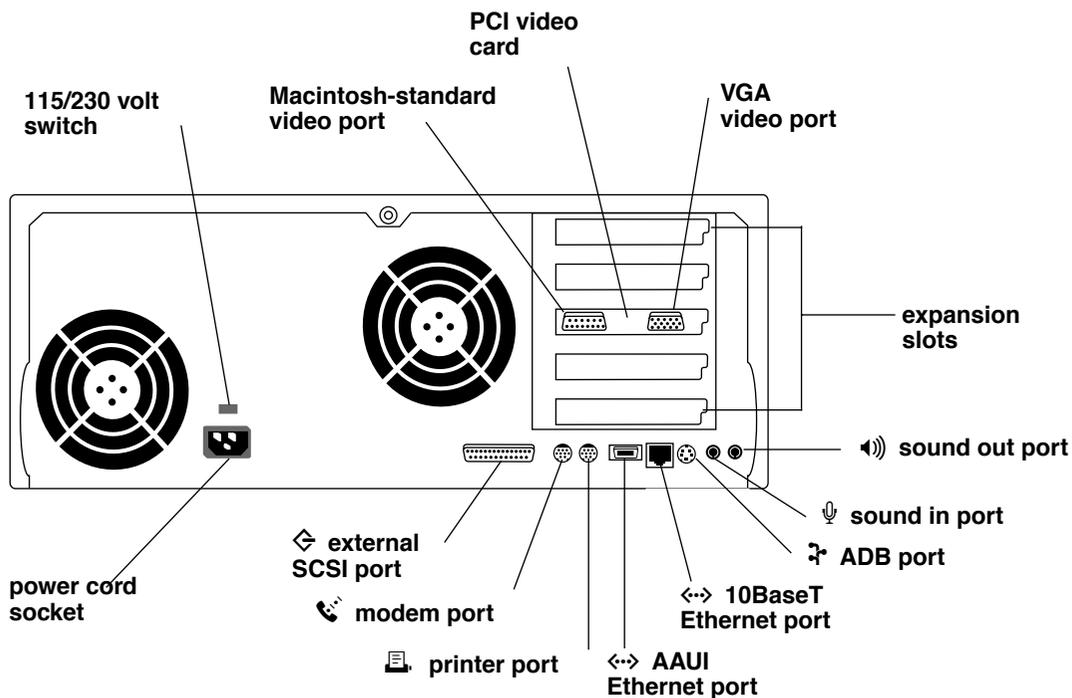


Tower System Front View

Here are the key features of the tower system front panel.

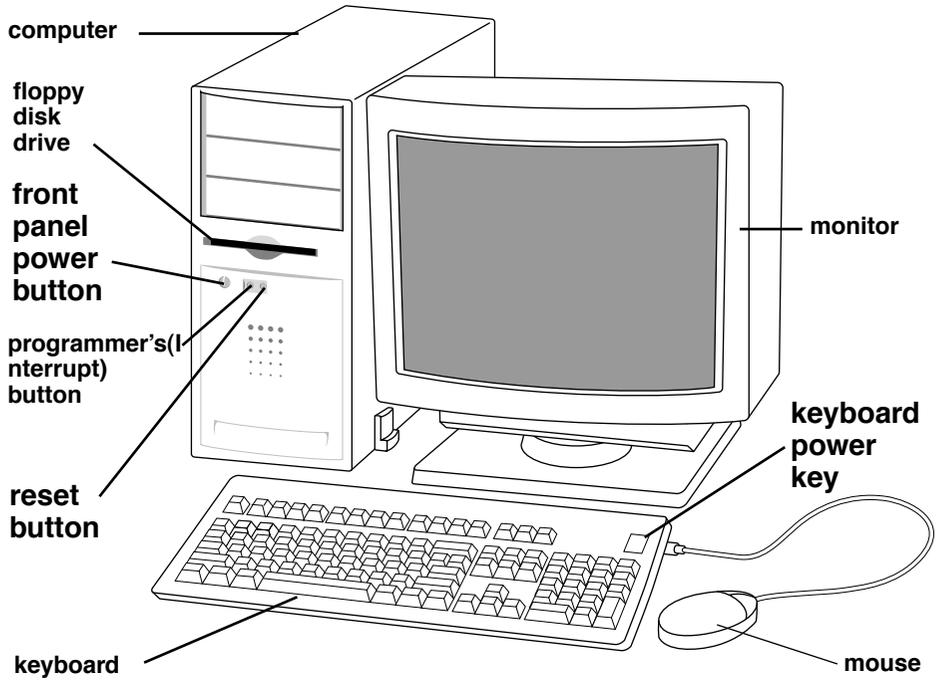

Tower System Rear View

Here are the key components of the tower system rear panel.

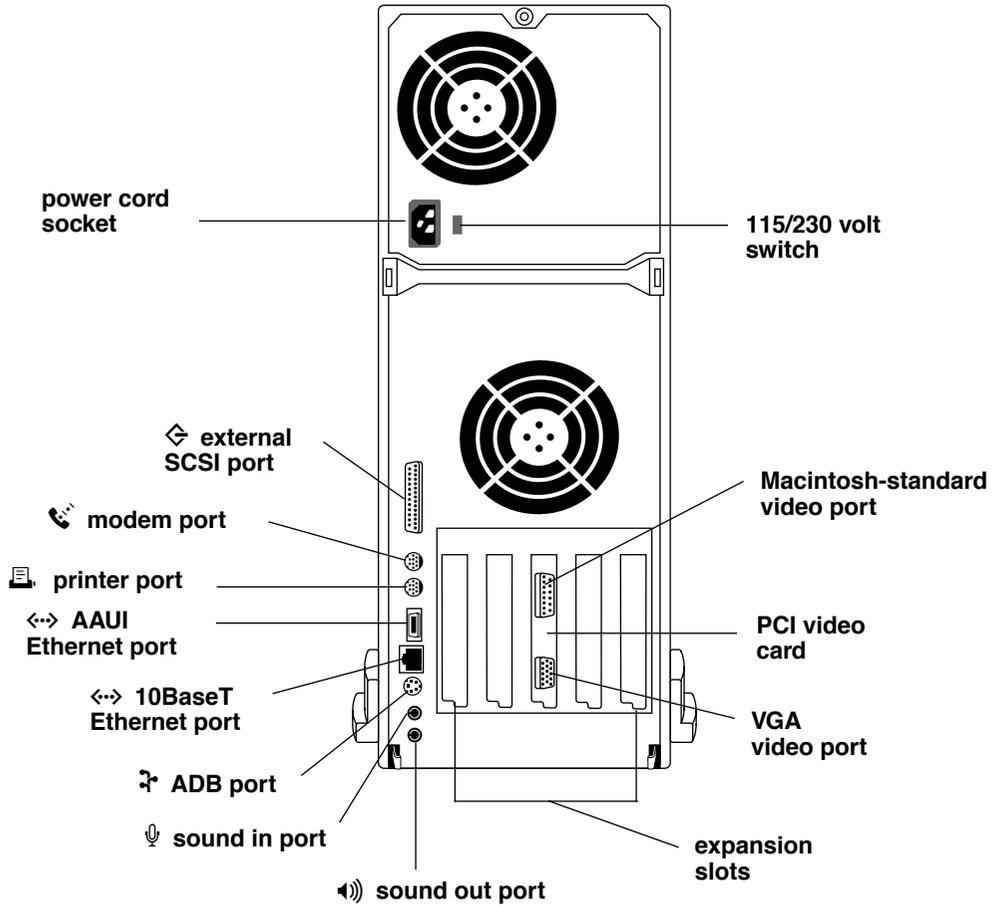

Return, Warranty, Satisfaction Guarantee, and License Information

RETURN POLICIES

If you received equipment (“Hardware”) from Power Computing Corporation (“Power”) in a damaged shipping container or if your Hardware was otherwise damaged in shipment to you, please contact the shipper immediately. All Hardware and packaging were fully inspected prior to shipment from Power, and you must file a claim with the shipper for any damages that may occur in shipment. Retain all shipping materials. Contact Power’s Customer Service Department if you need assistance with any such claims.

Customers who did not purchase systems directly from Power Computing must contact the dealer they purchased their system from for assistance.

Returns for Refund

To return Hardware manufactured by Power Computing Corporation and purchased under Power’s thirty-day money back guarantee, see the terms of the Customer Satisfaction Guarantee. You must contact Customer Service for a Return Merchandise Authorization (“RMA”) before returning the merchandise.

After your return request is received, Power’s Customer Service will issue you an RMA number, along with shipping instructions for return of the Hardware. This number is valid for ten (10) days from the date of issuance. The Hardware must be received by Power on or before the tenth day after issuance of the RMA number. Returns will not be accepted without a valid RMA number written on the box.

Note: A sample shipping label is included in the back of the manual.

Returns for Repair

In order to return Hardware for warranty or non-warranty service, you must request an RMA by contacting Power’s Technical Support or Customer Service Department.

We strongly urge you to back up all data stored on the Hardware on a regular basis and before returning your Hardware to Power for repair; Power is not responsible for any loss of data.

If Power finds defective components, materials or workmanship in your Hardware, Power will use reasonable efforts to repair or replace the Hardware. If the Hardware is under warranty, there shall be no charge to you for such repairs or replacement, and the Hardware will be returned to you using the same class of service for shipping. Otherwise, Power’s standard charges for parts, labor, shipping and handling will apply.

Shipment of Hardware to Power

For both types of returns, all Hardware should be returned in the original packaging material, accompanied by all components that might affect the Hardware's performance, and the Hardware must have the RMA number clearly written at least three (3) times on the outside of each box. You bear all costs and risks of loss in connection with shipping the Hardware back to Power Computing. We recommend that the package(s) be insured for the full purchase amount.

These policies are subject to change at the discretion of Power Computing, except that any changes in these policies will not apply to Hardware sold to customers prior to the effective date of any policy change. If you have any questions regarding these policies, please contact Power Computing Customer Service.

Dealers, Distributors, Leasing Companies, VARs, and other resellers of Power Hardware are not eligible for the Satisfaction Guarantee return and refund policies. Sales to those entities will be final unless otherwise agreed to in writing by Power. Customers who did not purchase systems directly from Power Computing must contact the dealer they purchased their system from for assistance.

Contact Power Customer Service by calling (800) 671-6227, faxing 512 388-6789, or e-mailing custserv@powercc.com and completely describe any problems issues you need resolved with respect to Power Computing. Be sure to include your order or quote number, serial number, and phone number with all correspondence.

Contact Power Technical Support by calling (800) 708-6227, faxing 512 388-6789, or e-mailing support@powercc.com and completely describe the problem that you are having with your Hardware. Be sure to include your model number, serial number, date of purchase and phone number with all correspondence. We advise you to confirm receipt of all fax or e-mail requests.

LIMITED WARRANTY

One-Year Limited Hardware Warranty

Power Computing Corporation (“Power”) warrants the computer hardware delivered to you by Power (“Hardware”) against defects in components, materials and workmanship for a period of one year from the date of original purchase of the Hardware by the end user (proof of purchase required). If Power finds defective components, materials or workmanship in your Hardware, Power shall, at its option, either repair or replace the Hardware at no charge to you.

Exclusions

The above warranty shall not apply to defects to Power Hardware resulting from improper or inadequate maintenance by you; software or interfacing supplied by you; unauthorized modification, neglect, abuse or misuse of the Hardware, including without limitation operation of the Hardware in an environment other than an ordinary office or home; or acts of God. Power makes no warranties with respect to the software and other accessories provided with the Hardware beyond those provided by the respective vendors of such items. Power shall not be liable for shipping damages.

Obtaining Warranty Service

To obtain warranty service, you must return your Hardware, freight pre-paid, to a service facility authorized by Power in accordance with Power's then-current Return Policy. All Power Hardware must be returned in original packaging material.

Warranty Limitations

Power makes no other warranties, either express, implied, or statutory, including without limitation any implied warranties of merchantability or fitness for a particular purpose.

The remedies provided for above are exclusive and in lieu of all others, whether oral or written, express or implied.

Power shall not be liable to you or any third party, pursuant to this warranty or in any other way with respect to the use of the Hardware, for any amounts representing loss of profits, loss of data, downtime, loss of goodwill or business, damage to or replacement of equipment and/or property, or any costs of recovering, reprogramming or reproducing any program or data stored on or used with the Hardware, or any indirect, consequential, or punitive damages of you or any third party, whether resulting from breach of warranty or any other legal theory.

This warranty gives you specific legal rights, and you may also have other rights that may vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties, so the above limitations or exclusions may not apply to you.

CUSTOMER SATISFACTION GUARANTEE

Within thirty (30) days of receipt of merchandise, you may return any computer system purchased from Power Computing (“Hardware”) for a full refund of the cost of the system if you are not entirely satisfied, as long as the following conditions are met:

1. Contact Power Computing Customer Service to obtain a Return Merchandise Authorization number, at 800 671-6227 (512 388-6700 for international customers).
2. Repack and seal the Hardware and all documentation, software, accessories, registration cards and other materials originally supplied with the Hardware in the original packing material.
3. Fill in completely and attach the accompanying Merchandise Return Label securely to the outside of the package so that Power can properly process and credit your return.
4. Ship the Hardware to Power Computing at the address shown on the Merchandise Return Form. Make sure the shipper does not cover the form. The Hardware must be received by Power Computing on or before the thirtieth day after you receive the system(s).
5. You should pre-pay shipment, and assume all risks of loss or damage in connection with shipping the system back to Power Computing. We recommend that package(s) be insured for the full purchase amount.
6. Refunds or credits for Hardware returned under this guarantee will be made pursuant to Power Computing's Refund Policy in effect as of the date of sale of the Hardware. Refunds or credits will be issued only after the Hardware is verified by Power to be in “like-new” condition. Reductions in credit will result if Hardware is in “less-than-new” condition, or if any documentation, software, accessories and other materials originally supplied with the Hardware are not returned completely intact. Once approval is given for a refund or credit, processing will vary according to payment method. If the Hardware was paid for with a valid credit card, a credit will be applied to the same credit card account. If payment was made with a check, a refund check will be mailed to the customer. Other payment methods will involve appropriate refunds or credits according to Power's accounting department policies.
7. Hardware received with any shipping charges due or after the thirtieth day after receipt of the system(s) by the customer will be refused by Power Computing and returned to the sender. We will also return any Hardware that is not in “like-new” condition and accompanied by all documentation, software, accessories, registration cards and other materials originally supplied with the Hardware, as determined by Power. If any of these circumstances occur, eligibility for the thirty-day money back guarantee may no longer apply.

Apple Computer, Inc. System Software License Agreement

PLEASE READ THIS LICENSE CAREFULLY BEFORE USING THE SOFTWARE. BY USING THE SOFTWARE, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE TO THE TERMS OF THIS LICENSE, PROMPTLY RETURN THE UNUSED SOFTWARE TO THE PLACE WHERE YOU OBTAINED IT AND YOUR MONEY WILL BE REFUNDED.

1. License. The application, demonstration, system and other software accompanying this License, whether on disk, in read only memory, or on any other media (the “Apple Software”), the related documentation and fonts are licensed to you by Apple. You own the disk on which the Apple Software and fonts are recorded but Apple and/or Apple's Licensor(s) retain title to the Apple Software, related documentation and fonts. This License allows you to use the Apple Software and fonts on a single Apple computer and make one copy of the Apple Software and fonts in machine-readable form for backup purposes only. You must reproduce on such copy the Apple copyright notice and any other proprietary legends that were on the original copy of the Apple Software and fonts. You may use the Apple Software in a networked environment so long as each computer in such environment is the subject of a license for the Apple Software; however, you may not electronically transmit the Apple Software from one computer to another over a network. You may also transfer all your license rights in the Apple Software and fonts, the backup copy of the Apple Software and fonts, the related documentation and a copy of this License to another party, provided the other party reads and agrees to accept the terms and conditions of this License.

2. Restrictions. The Apple Software contains copyrighted material, trade secrets and other proprietary material and in order to protect them you may not decompile, reverse engineer, disassemble or otherwise reduce the Apple Software to a human-perceivable form. You may not modify, network, rent, lease, loan, distribute or create derivative works based upon the Apple Software in whole or in part, except for the limited networking described above in Section 1. THIS APPLE SOFTWARE MAY NOT BE IMPORTED TO, USED IN, OR RE-EXPORTED FROM FRANCE OR ANY OF ITS COLONIES OR TERRITORIES.

3. Termination. This License is effective until terminated. You may terminate this License at any time by destroying the Apple Software, related documentation and fonts and all copies thereof. This License will terminate immediately without notice from Apple if you fail to comply with any provision of this License. Upon termination you must destroy the Apple Software, related documentation and fonts and all copies thereof.

4. Export Law Assurances. You agree and certify that neither the Apple Software nor any other technical data received from Apple, nor the direct product thereof, will be exported outside the United States except as authorized and as permitted by the laws and regulations of the United States. If the Apple Software has been rightfully obtained by you outside of the United States, you agree that you will not re-export the Apple Software nor any other technical data received from Apple, nor the direct product thereof, except as permitted by the laws and regulations of the United States and the laws and regulations of the jurisdiction in which you obtained the Apple Software.

5. Government End Users. If you are acquiring the Apple Software and fonts on behalf of any unit or

agency of the United States Government, the following provisions apply. The Government agrees:

(i) if the Apple Software and fonts are supplied to the Department of Defense (DoD), the Apple Software and fonts are classified as “Commercial Computer Software” and the Government is acquiring only “restricted rights” in the Apple Software, its documentation and fonts as that term is defined in Clause 252.227-7013(c)(1) of the DFARS; and

(ii) if the Apple Software and fonts are supplied to any unit or agency of the United States Government other than DoD, the Government's rights in the Apple Software, its documentation and fonts will be as defined in Clause 52.227-19(c)(2) of the FAR or, in the case of NASA, in Clause 18-52.227-86(d) of the NASA Supplement to the FAR.

6. Limited Warranty on Media. Apple warrants the diskettes and/or compact disc on which the Apple Software and fonts are recorded to be free from defects in materials and workmanship under normal use for a period of ninety (90) days from the date of purchase as evidenced by a copy of the receipt. Apple's entire liability and your exclusive remedy will be replacement of the diskettes and/or compact disc not meeting Apple's limited warranty and which is returned to Apple or an Apple authorized representative with a copy of the receipt. Apple will have no responsibility to replace a disk/disc damaged by accident, abuse or misapplication. ANY IMPLIED WARRANTIES ON THE DISKETTES AND/OR COMPACT DISC, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO NINETY (90) DAYS FROM THE DATE OF DELIVERY. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY BY JURISDICTION.

7. Disclaimer of Warranty on Apple Software. You expressly acknowledge and agree that use of the Apple Software and fonts is at your sole risk. The Apple Software, related documentation and fonts are provided “AS IS” and without warranty of any kind and Apple and Apple's Licensor(s) (for the purposes of provisions 7 and 8, Apple and Apple's Licensor(s) shall be collectively referred to as “Apple”) EXPRESSLY DISCLAIM ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. APPLE DOES NOT WARRANT THAT THE FUNCTIONS CONTAINED IN THE APPLE SOFTWARE WILL MEET YOUR REQUIREMENTS, OR THAT THE OPERATION OF THE APPLE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE APPLE SOFTWARE AND THE FONTS WILL BE CORRECTED. FURTHERMORE, APPLE DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE APPLE SOFTWARE AND FONTS OR RELATED DOCUMENTATION IN TERMS OF THEIR CORRECTNESS, ACCURACY, RELIABILITY, OR OTHERWISE. WITHOUT PREJUDICE TO THE GENERALITY OF THE FOREGOING, APPLE DOES NOT WARRANT OR MAKE ANY REPRESENTATION OR GUARANTEE REGARDING THE AUTHENTICITY OR SECURITY OF ANY DIGITAL SIGNATURE GENERATED USING THE APPLE SOFTWARE, OR ANY WARRANTY OR REPRESENTATION THAT THE PERSON OR ENTITY THAT IS USING SUCH A DIGITAL SIGNATURE HAS THE AUTHORITY TO DO SO. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY APPLE OR AN APPLE AUTHORIZED REPRESENTATIVE SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. SHOULD THE APPLE SOFTWARE PROVE DEFECTIVE, YOU (AND NOT APPLE OR AN APPLE AUTHORIZED REPRESENTATIVE) AS-

SUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

8. Limitation of Liability. UNDER NO CIRCUMSTANCES INCLUDING NEGLIGENCE, SHALL APPLE BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE, INCLUDING BUT NOT LIMITED TO THE IMPROPER, WRONGFUL, OR FRAUDULENT USE OF THE DIGITAL SIGNATURES GENERATED USING THE APPLE SOFTWARE, OR INABILITY TO USE THE APPLE SOFTWARE OR RELATED DOCUMENTATION, EVEN IF APPLE OR AN APPLE AUTHORIZED REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

In no event shall Apple's total liability to you for all damages, losses, and causes of action (whether in contract, tort (including negligence) or otherwise) exceed the amount paid by you for the Apple Software and fonts.

9. Controlling Law and Severability. This License shall be governed by and construed in accordance with the laws of the United States and the State of California, as applied to agreements entered into and to be performed entirely within California between California residents. If for any reason a court of competent jurisdiction finds any provision of this License, or portion thereof, to be unenforceable, that provision of the License shall be enforced to the maximum extent permissible so as to effect the intent of the parties, and the remainder of this License shall continue in full force and effect.

10. Complete Agreement. This License constitutes the entire agreement between the parties with respect to the use of the Apple Software, related documentation and fonts, and supersedes all prior or contemporaneous understandings or agreements, written or oral, regarding such subject matter. No amendment to or modification of this License will be binding unless in writing and signed by a duly authorized representative of Apple.

Note: The Apple Software Registration Card is in the back of the manual.

Chapter 1 Getting Started

Your computer has been designed for easy plug-and-play setup in four simple steps - if you are in need of technical assistance, please feel free to call Power Computing Technical Support at 1-800-708-6227.

Note: This manual covers both desktop and tower systems, so look for the illustration that fits your system.

- Find a place for the computer and monitor
- Plug in the computer
- Connect the monitor
- Connect the mouse and keyboard

Finding a place for the computer and monitor


Think carefully about where you place your computer and monitor. Here are some suggestions to help you find a good place:

- Make sure there is a grounded, three-hole electrical outlet within a few feet.
- Use a sturdy, level table or desk as a work surface. Make sure that you can position your monitor, keyboard, and mouse so that you can work comfortably. See Appendix A, “Safety and Health Information,” on page 55 for detailed instructions.
- You can place monitors up to 132 lb. (60 kg) on top of the desktop computer. If you have a heavier monitor or a tower system, place the monitor directly on your work surface.
- Leave a few inches of space around the computer and monitor for air to circulate.

Getting Started

Plugging in the computer

Set up and plug in the computer before connecting the monitor, keyboard, and other devices. Plugging in the computer ensures that it is grounded and protected from electrical damage. The key components for plugging in the computer are shown below.

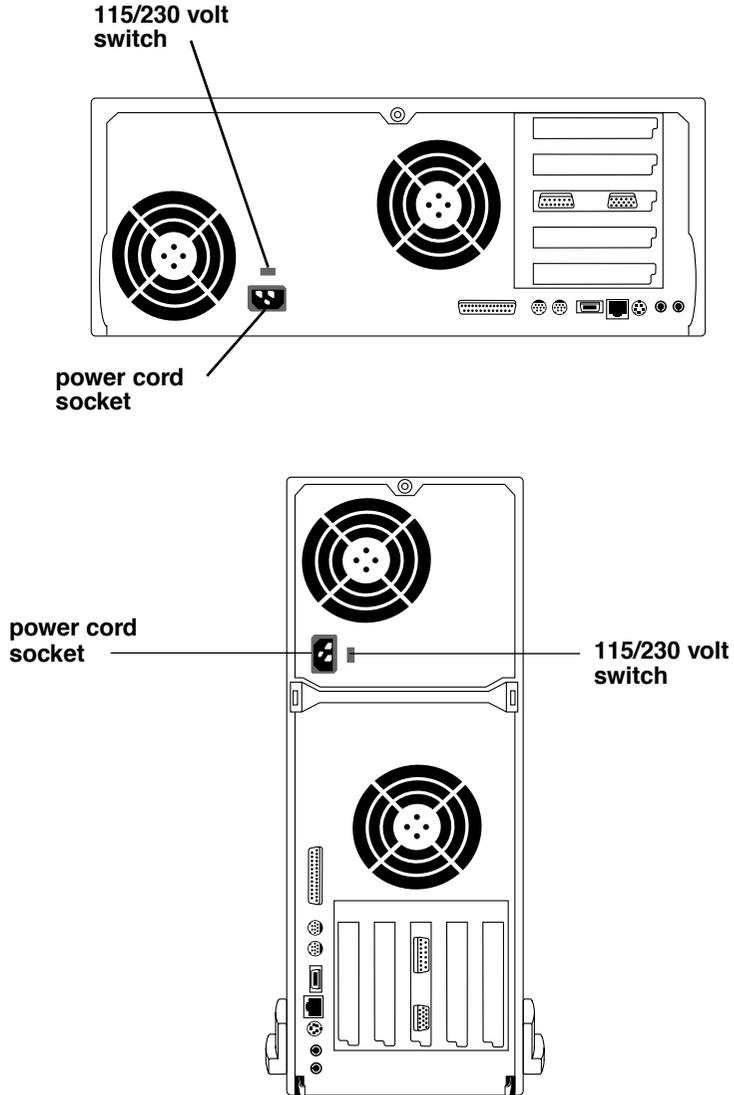

WARNING! For your safety, the computer is equipped with a three-prong plug designed to be used with a grounded electrical outlet. If you do not have access to an appropriate outlet, have an electrician install one. Do not use your computer with a three-prong adapter in an ungrounded outlet.

To plug in the computer:



CAUTION: Do not press the power switch on the front panel of the computer or the keyboard power switch until you have completed all of the setup instructions.

- 1. Place the computer in the location you have chosen.**
- 2. Set the 115/230 volt switch to the correct setting for your country.**
Set the switch to 115 volts for the U.S., Canada, and Japan. Use the 230-volt setting in most European countries.
- 3. Connect the socket end of the power cord to the power plug on the back of the computer.**
- 4. Plug the other end of the power cord into a grounded, three-hole electrical outlet. If you have any expansion cards, follow the instructions in See “Installing expansion cards” on page 19. to install them now. If not, continue with the following section.**

Getting Started

Connecting the monitor

Your computer can be used with a wide variety of monitors. It comes with a high-performance 64-bit PCI video card which comes with 2 MB of Video RAM (upgradeable to 4 MB). The key components for connecting the monitor are shown below.

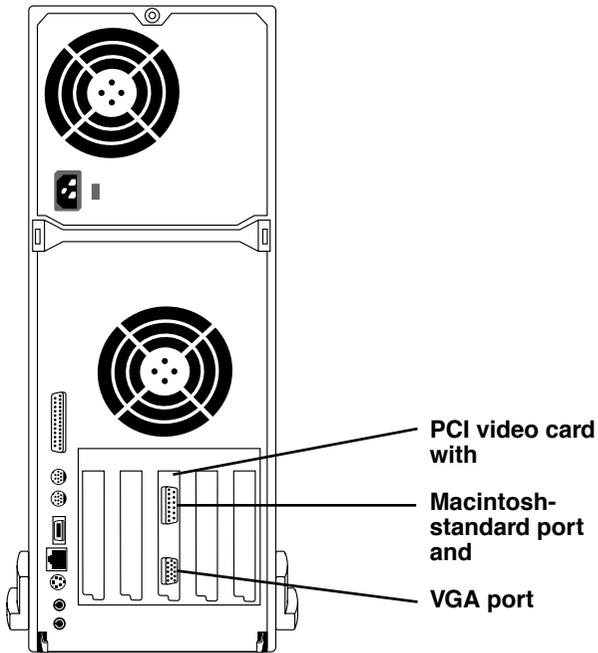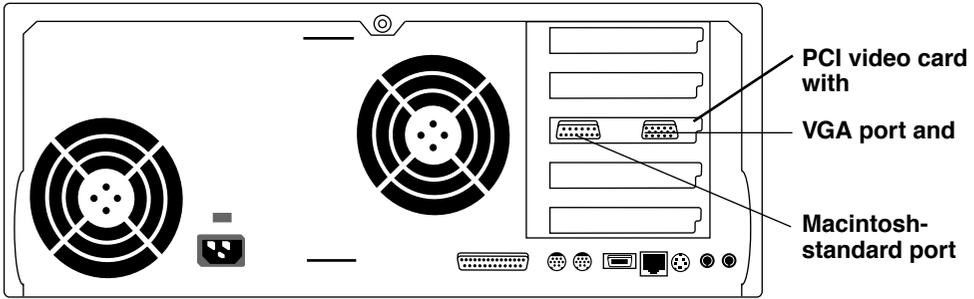

- The Macintosh-standard monitor port on the high-performance video card allows you to connect Macintosh-style connectors.
- The VGA monitor port on the high-performance video card allows you to connect a standard VGA or SVGA monitor and use PC-style connectors.

CAUTION: Do not connect monitors to both video ports of the high-performance video card simultaneously.

You may add additional VRAM to the high-performance video card up to a total of 4 MB. See “VRAM configurations” on page 69 for details on monitor size, resolutions number of colors supported. See “Increasing memory” on page 23 for information about how to add VRAM.

Use the Monitors control panel in Mac OS to control how the monitor is configured. See Macintosh Guide (available through the Guide menu, marked with ) or *Macintosh System 7.5 for Dummies* for additional information about using the Monitors control panel.

Connecting the monitor involves two steps: plugging in the monitor and connecting the monitor cable.

To plug in the monitor:

1. Place the monitor on your desk or in another location you have chosen.
2. If necessary, connect the power cord to the monitor.
Some monitors have permanently attached power cords.
3. Plug the monitor power cord into a grounded, three-hole outlet.

To connect the video cable:

1. If necessary, attach the video cable to the monitor.

Some video cables are permanently attached.

2. Connect the video cable to the monitor port on the back of the computer.


There are two types of video port connectors on the back of your computer: Macintosh-standard and VGA. Connect your monitor to the appropriate port for your monitor. See figure below to tell which one you have. Do not connect monitors to both ports. The video card automatically senses which port you are using.

- If you are using a monitor with a Macintosh-standard video connector, (the larger of the two connectors) connect the monitor cable to the Macintosh-standard port of the high-performance video card.

Getting Started

- If you are using a VGA monitor with a PC-style connector (the smaller of the two connectors), connect the monitor cable to the VGA port of the high-performance video card.

3. Install the EMI choke on the video cable.

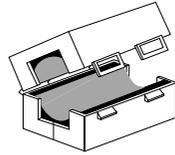

If your monitor cable does not come with a built-in EMI choke, an EMI choke is included in your pizza box. The EMI choke is a small white rectangular object which comes packed in the pizza box with the manuals and cables.

To install the choke, open it up and clamp it over the video cable at the end of the cable that connects to the computer.

Connecting the mouse and keyboard



Once you have connected the monitor, you can connect the mouse and keyboard.

To connect the mouse and keyboard:

1. Plug the mouse cable into an ADB port on the keyboard.

There is an ADB port at each end of the keyboard; use whichever one you prefer.

2. Plug the keyboard cable into the ADB port (marked with ) on the back of the computer.

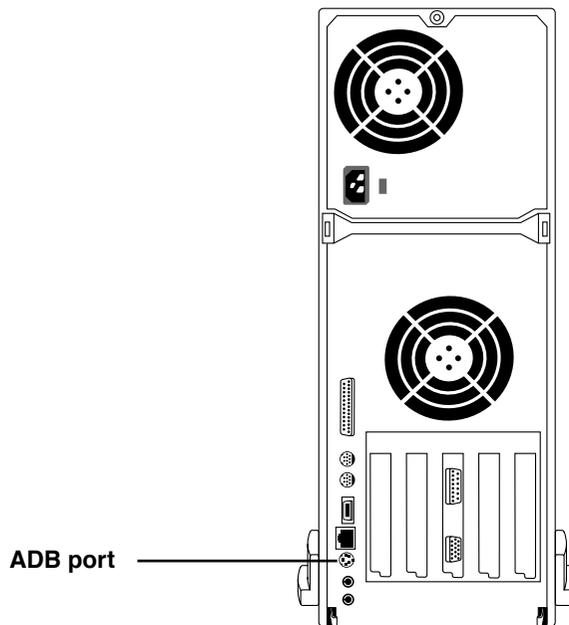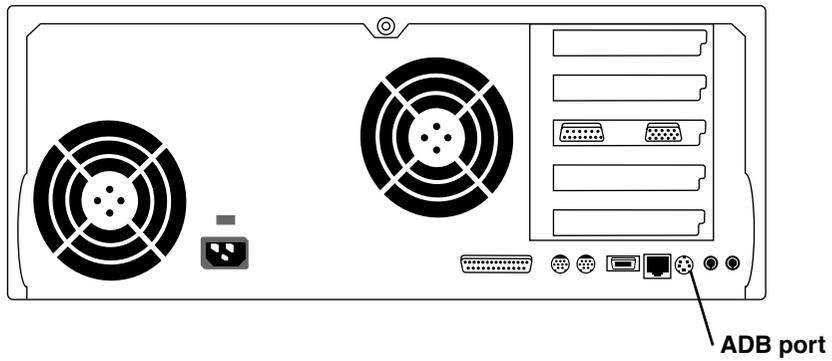

Getting Started

Turning the computer on


When the computer, monitor, keyboard, and mouse are connected, you can turn the computer on.


To turn the computer on:

1. Turn on the monitor.

See the documentation that came with the monitor for the location of the power switch.

2. Turn the computer on by pressing the keyboard power key (marked with a triangle) on the upper right corner of the keyboard or the front panel power button on the front of the computer.

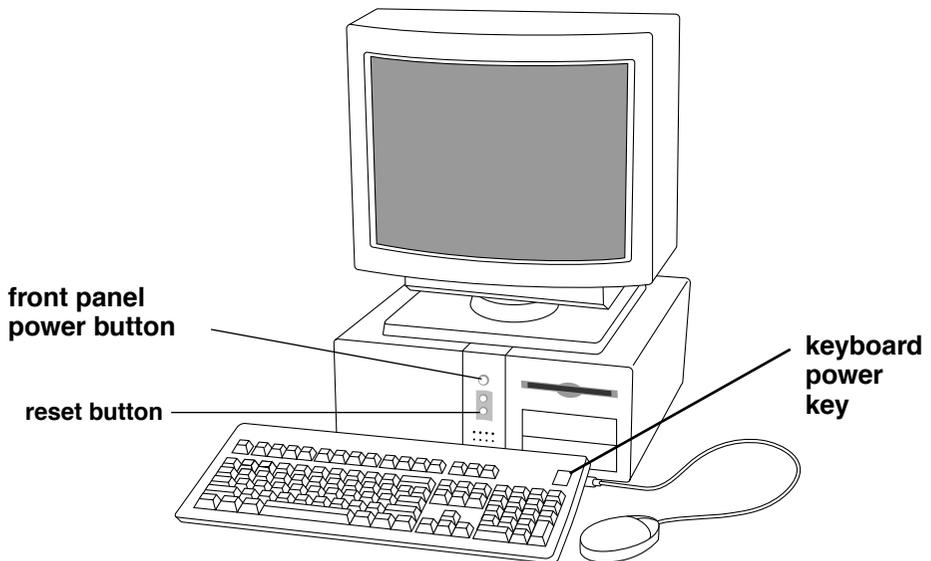

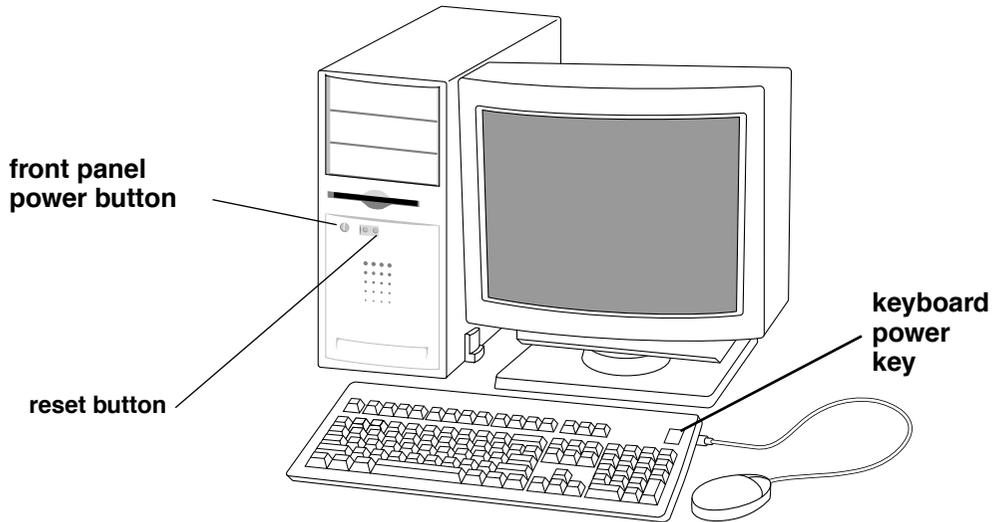

When the computer finishes its start-up procedure, you should see the Mac OS desktop. If you see a blinking question mark, you need to install the system software on your hard disk. See Appendix C, “Installing System Software,” on page 63. If you see a blank screen or anything not already described, see the section following this one, “Problems starting up.”

When you need to shut your computer down, follow the instructions in “Shutting down” on page 13.

Problems starting up

If you see a blank screen when you start up, check the following items to identify the source of the problem:

- First try rebooting by pressing the reset button on the front of the computer.
- Are the computer and monitor plugged in? If they are plugged into a power strip, is it turned on?
- Are the computer and monitor turned on? The power button on the front of the computer should be lighted. Most monitors also have power lights.
- Is the video cable securely connected to the monitor and computer? (If you need to reattach the cable, first turn off the computer and monitor.)
- Are the keyboard and mouse properly connected to the computer? (If you need to reconnect them, first turn off the computer to avoid damage.)

Getting Started

- Is the brightness control on the monitor turned too far down? Check the documentation that came with your monitor for instructions.

Chapter 2 Getting Started With Mac™ OS

Your computer uses the Mac™ OS operating system, which offers a unique combination of power and ease of use. This chapter offers very basic instructions about how to use the built-in learning features of Mac OS. It also explains how to shut down your computer properly. For more detailed information about the Mac OS, refer to *Macintosh System 7.5 For Dummies*.

Running the Basics tutorial

Mac OS includes a tutorial program called Mac™ OS Tutorial that shows you how to use the fundamental features of the software. If you are brand new to Mac OS, we suggest you complete the tutorial before you begin working with your computer.

In Mac OS, you use the mouse for tasks such as choosing menu commands or starting programs. When you move the mouse, the *mouse pointer* (the small arrow on the screen, sometimes referred to as the *cursor*) moves in the same direction. By placing the tip of the mouse pointer over an icon and clicking twice quickly (*double-clicking*), you can open a folder or launch a program.

To run the Basics program:

- 1. In the Mac OS desktop, if your hard disk window is not already open, double-click the icon that represents your hard disk (located in the upper-right corner of the screen). Be careful to place the mouse pointer over the icon, not on the words below.**

The hard disk icon “opens,” displaying a “window” containing the files and folders stored on the hard disk.

- 2. Double-click the folder called Mac™ OS Tutorial.**

The folder opens, displaying the Mac™ OS Tutorial Part 1 icon.

- 3. Double-click the Mac™ OS Tutorial Part 1 icon.**

The program starts up, displaying an introductory screen.

- 4. Follow the on-screen instructions to complete the tutorial.**

Using on-line help

Mac OS (and many applications that run under it) include an on-line help system with information about using the software. The help system for Mac OS is called Macintosh Guide and is available through the Guide menu (marked with ).


To use Macintosh Guide

1. Choose Finder from the Application menu (in the upper-right corner of the desktop) to make it the active application.



2. Choose Macintosh Guide from the Guide menu (marked with ) or press **⌘-?**.

The Macintosh Guide window appears.

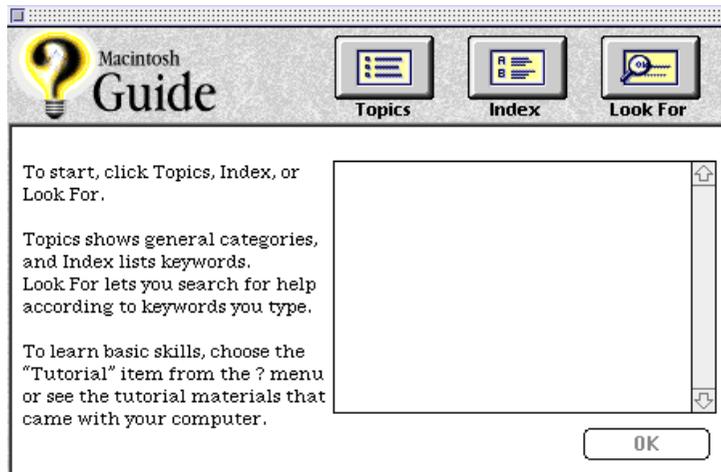

3. Follow the on-screen instructions to get the information you need.

Shutting down

When you are finished working with your computer, it is very important to shut it down correctly.

□ To shut down the computer:

1. Choose Shut Down from the Special menu in Mac OS.


You are prompted to save any unsaved files before shutting down.



OR

2. Press the power key on the keyboard

A Shut Down dialog box is displayed

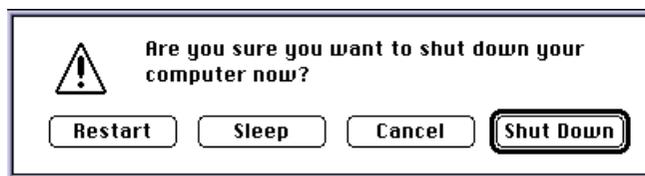

Choose the **Shut Down** option by pressing the **return** key.

CAUTION: Do not use the power button on the front panel to turn off the computer. If you do, unsaved or open documents may be lost and you may damage System files.

3. In the unlikely event that the system does not respond to mouse movement or the keyboard, see Appendix B, “Troubleshooting” on page 53.

Sleep

If you choose the **Sleep** option in the shutdown sequence or from the Special menu, the system will enter energy-saving “sleep” mode. The monitor will go dark if it is an energy-saving monitor running off a sleep-savvy video card, and the mouse will stop responding to movement.

To wake the system up, press any key.

The standard high-performance video card shipped with the PowerWave system is not sleep-savvy.

Chapter 3 Upgrading Your Computer

This chapter explains how to enhance the capabilities of your computer by adding expansion cards, additional memory, and internal devices such as an additional hard disk.

Removing the cover

Installing expansion cards, RAM, internal drives and require that you remove the computer's cover. The cover is designed for easy removal; no tools are required.

- CAUTION!**
- 1. If you are not proficient with electronic equipment, Power Computing Corporation recommends that you have a qualified technician install RAM and/or NuBus expansion cards. If you attempt to install RAM or cards yourself, any damage you may cause to your equipment will not be covered by the limited warranty on your computer. Please call technical support at 1-800-708-6227 for additional information about this or any other warranty question.**
 - 2. If an anti-static bracelet was supplied with the expansion card or other device that you are installing, put it on and ground it as directed by the device's instructions before touching any components inside the computer.**
 - 3. Never turn the computer on or operate the computer with the cover removed.**

Upgrading Your Computer

□ To remove the cover:

1. **Shut down the computer and turn off the monitor, but leave them plugged in.**

Leaving the computer plugged in ensures that it is grounded.

2. **If the monitor is on top of the computer, disconnect it if necessary, and set it aside.**

Otherwise it's going to be awkward to remove the computer cover.


3. **Disconnect everything but the power cord from the back of the computer.**

4. **Rotate the computer so that its back panel faces you.**


5. **Remove the large thumb screw from the rear of the computer.**

Put the thumb screw in your left front pocket or somewhere else where you won't lose it.

6. **Gently pull apart the bottom corners of the cover (on the tower system, press the clips at the bottom rear of the case outward), pull the cover toward you slightly, lift it off and set it aside.**

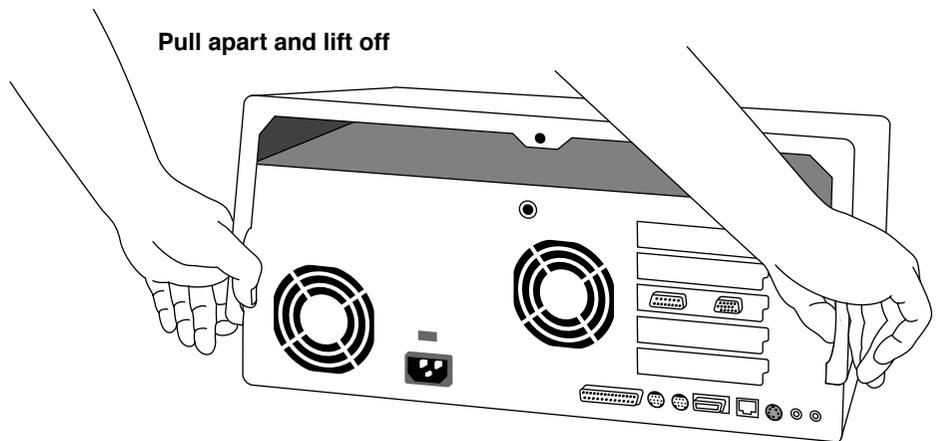


Upgrading Your Computer

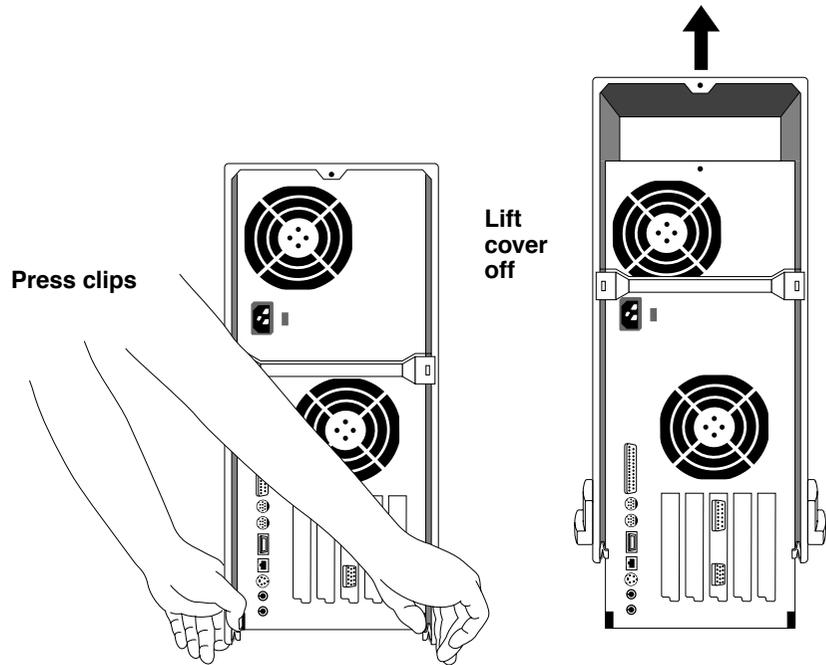

7. If you are working on a tower system, gently lay the computer on its side as shown in the next step.

Upgrading Your Computer

8. Before touching any components inside the computer, touch the metal plate over the hard disk drive to discharge any static electricity that might have built up on your clothes or body.


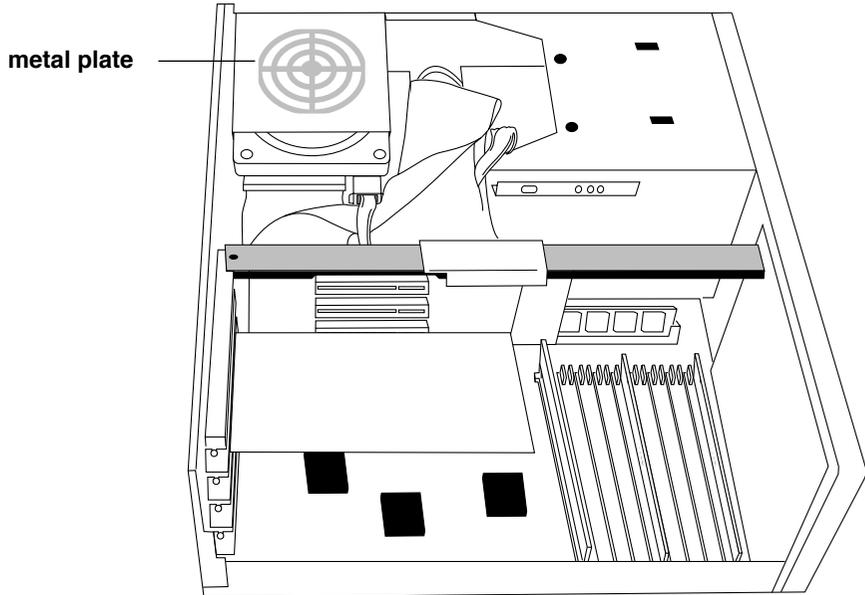


To replace the cover, reverse steps 5, 6, and 7; and then re-connect everything.

Installing expansion cards

You can install expansion cards that enhance your computer's capabilities—for example, by increasing processing power, improving graphics and video performance, or adding networking and communications capabilities. There are two different expansion card options for the PowerWave 120/132/150, depending on which riser card you have, a 3-card PCI option or a 2-PCI+2-NuBus card option.

If you do not know which kind of riser card you have, remove the computer cover and look at the riser card which holds your video card. If that riser card has three long slots, you have a PCI-only system; if it has two long slots and two shorter ones, you have a PCI plus NuBus system.

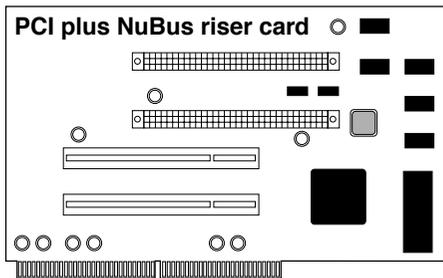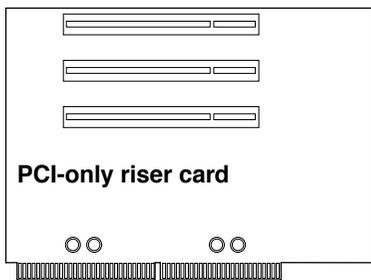



PCI-Only

The PCI riser card option allows you to install up to three standard PCI cards in the riser card attached to the motherboard. One of those slots is filled with the standard high-performance video card shipped with the system, leaving two slots for additional PCI cards.

Upgrading Your Computer

PCI Plus NuBus

The PCI-NuBus riser card option allows you to install up to two standard PCI cards in the riser card attached to the motherboard, as well as up to two NuBus cards. One of the PCI slots is filled with the standard high-performance video card shipped with the system, leaving one PCI slot for an additional PCI card and two slots for Power Macintosh-compatible NuBus cards.

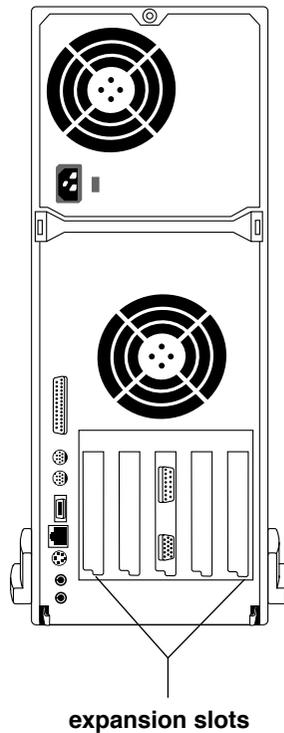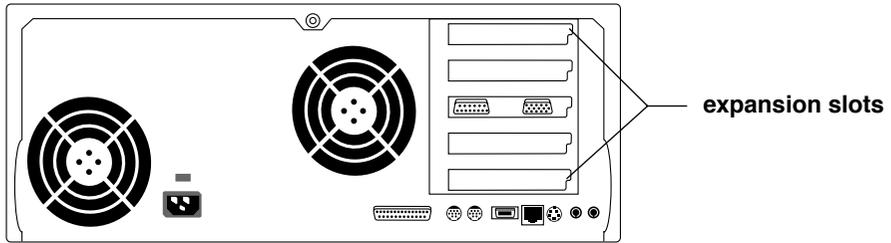

Upgrading Your Computer

Before you install any expansion cards, be sure to follow these guidelines to protect your computer:

- Do not remove factory-installed cards from inside the computer. Removing a card incorrectly can damage it and the computer. Contact Technical Support if you believe a factory-installed card requires repair or replacement.
- The combined power consumption of the expansion cards you install must not exceed the limits of your computer. Refer to the documentation that came with your cards for their power consumption rating and to “Power requirements” on page 70 in this manual for the power consumption limit for your computer.
- Some cards may need to be installed by an authorized service provider. Refer to the documentation that came with the card.

Upgrading Your Computer

□ To install an expansion card:

1. Remove the computer's cover.

See "Removing the cover," starting on page 15 for instructions.


WARNING! Make sure the computer is powered down before removing the cover.

CAUTION! Touch the metal plate over the hard disk drive to discharge any static electricity that might have built up on your clothes or body.

Use a grounding strap and handle memory modules by the non-metallic edges only.

2. If you are installing the card in a tower system, remove the two screws securing the end panel to the chassis and put them in your left front pocket or somewhere else where you will be able to find them later. (There is no end panel on the desktop system.)

Lift the panel from the chassis and set it aside.

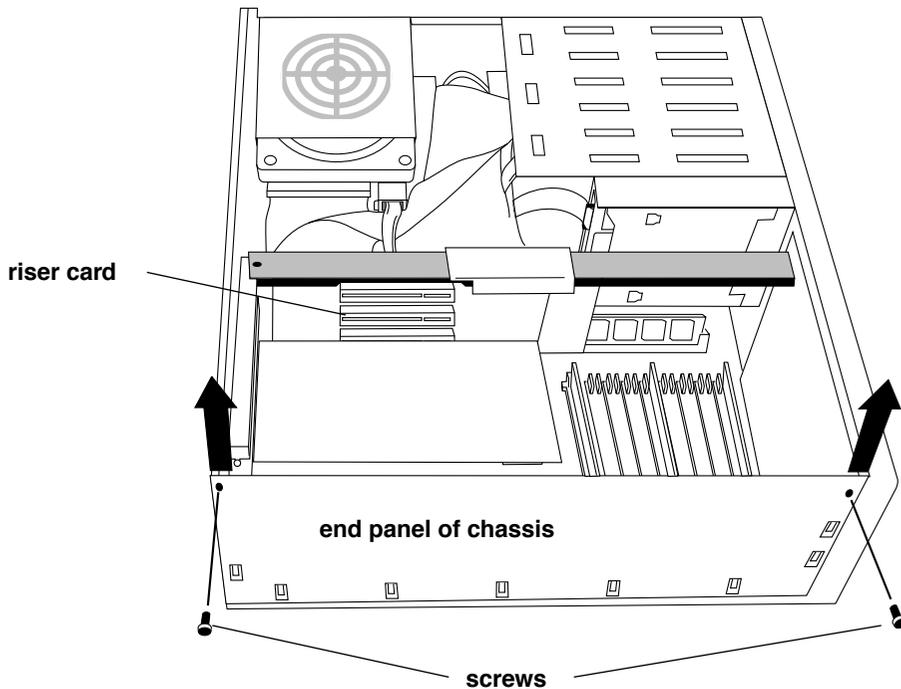


3. Remove the metal cover from the slot you want to use.

- If it is a PCI slot, remove the screw holding at the top of the slot and put it somewhere you will find it.

Pull the cover toward you so that the tongue at the bottom of the cover slides out of the slot in the chassis.

- If it is a NuBus slot, simply slide the cover out and away from the back panel.

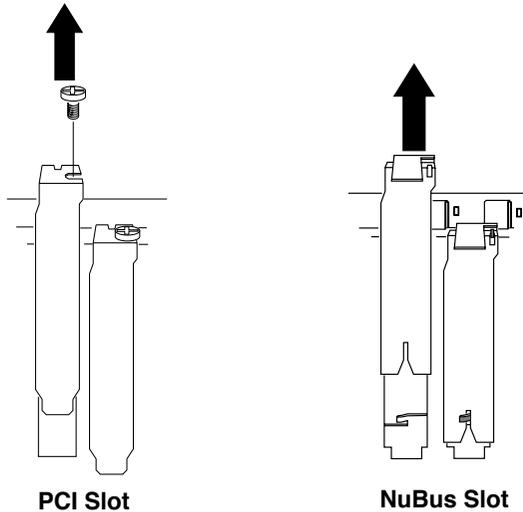

4. Remove the card from its static-proof bag.

Hold the card by its edges and its metal bracket to avoid touching components.

5. Align the card over the slot.

Hold the card just above the riser card to make sure that you are trying to install a PCI card into a PCI slot or a NuBus card into a NuBus slot.

Make sure that

- the connector on the bottom of the card lines up with the socket on the riser card
- the card bracket lines up with the slot on the back panel.

6. Push the card into the slot until it is firmly seated.

Do not force the card. If you feel a lot of resistance, pull the card out, realign it, and insert it again.

Upgrading Your Computer

- If you are installing a PCI card, the card bracket tongue and screw hole should line up with the groove and screw hole on the slot.

Replace and tighten the screw you removed from the slot cover.

- If you are installing a NuBus card, the hole in the card's bracket should snap into place over the tab on the back panel.

7. If you are installing the card in a tower system, replace the end cover.

You do know where those screws are, don't you?

8. Replace the computer cover and tighten the thumb screw.


WARNING! To prevent electrical shock, always replace the cover before turning on the computer.

Adding memory

Your computer's random-access memory (RAM) and video memory (VRAM) can be increased. Memory is increased by installing or replacing memory modules. The computer uses DIMMs, or dual in-line memory modules for RAM, and video memory modules for VRAM. Make sure that the memory modules you purchase are the right ones for your computer. See Appendix D, "Technical Information," on page 65 for technical specifications.

What you need to know about adding RAM

The computer has eight DIMM slots on the motherboard, near the front, (see the motherboard illustration below).

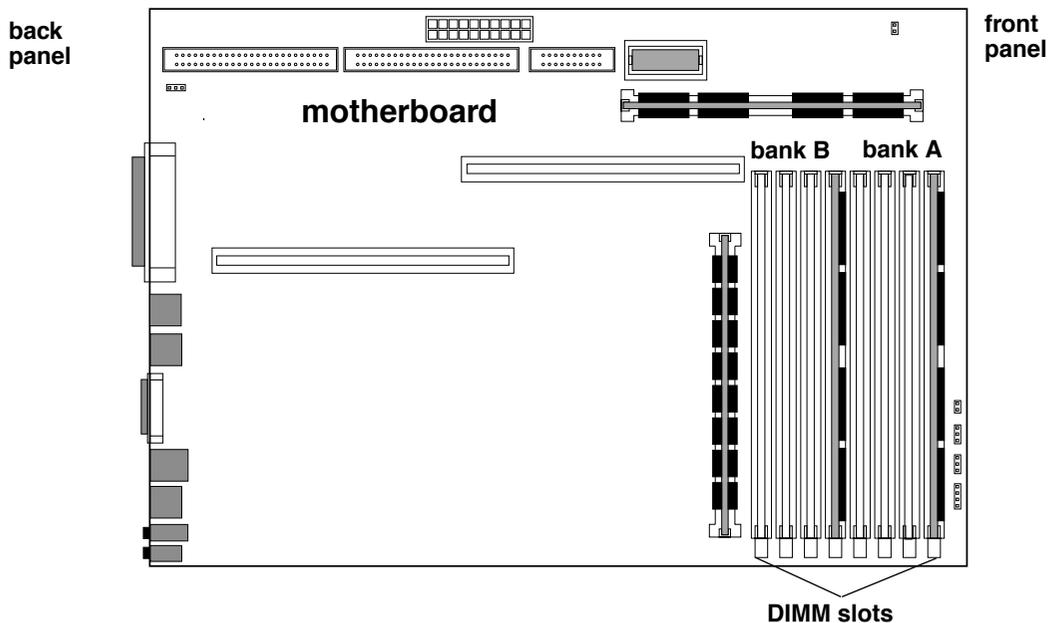

The DIMM clips are organized into two banks, A and B. Bank A is in the front and Bank B is behind it, as labeled on the motherboard. Each bank has four slots, numbered A1–A4 and B1–B4.

DIMMs can be inserted in any order, but if you install DIMMs of the same capacity in slots with the same number (A1 and B1, etc.), you will get better performance than if you install DIMMs unpaired. Slots with the same number provide interleaved memory.

Upgrading Your Computer

All DIMMs must be 168-pin, fast-paged mode, 70-nanosecond RAM access time or faster. Make sure that the memory modules you purchase are the right ones for your computer. You can install 8 MB, 16 MB, 32 MB, or 64 MB DIMMs up to a total capacity of 512 MB.

To increase your system's RAM, install additional DIMM modules in vacant DRAM slots; if there are no vacant slots, replace installed DIMM modules with modules of higher capacity.

Installing and Removing RAM

- CAUTION!**
- 1. If you are not proficient with electronic equipment, Power Computing Corporation recommends that you have a certified technician install RAM and/or NuBus expansion cards. If you attempt to install RAM yourself, any damage you may cause to your equipment will not be covered by the limited warranty on your computer. Please call technical support at 1-800-708-6227 for additional information about this or any other warranty question.**
 - 2. If an anti-static bracelet is available, put it on and ground it to your computer before touching any components inside the computer.**
 - 3. Handle DIMMs by the ends and avoid touching their contacts or other metal components.**
 - 4. Always store DIMMs in conductive bags.**
 - 5. Take your time; don't push yourself.**

Prepare the computer

- 1. If you haven't done so, remove the cover from the computer.**

See "Removing the cover," starting on page 15 for instructions.


WARNING! Make sure the computer is powered down before removing the cover.

CAUTION! Touch the metal plate over the hard disk drive to discharge any static electricity that might have built up on your clothes or body.

Use a grounding strap and handle memory modules by the non-metallic edges only.

2. If you are installing RAM on a tower system, remove the two screws securing the end panel to the chassis and put them somewhere else where you will be able to find them later.


Lift the panel from the chassis and set it aside.

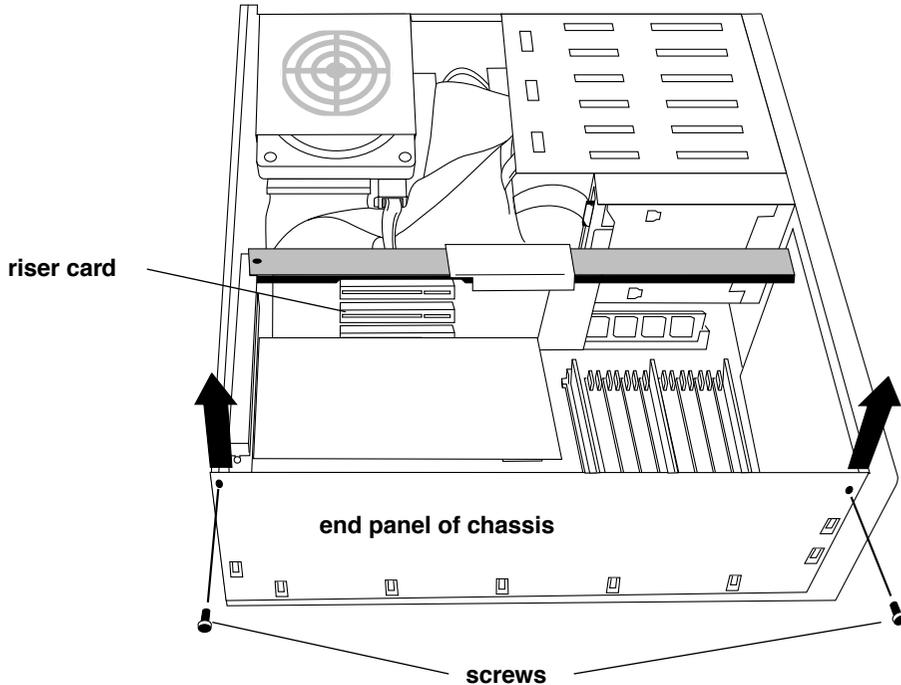

Upgrading Your Computer

❑ Removing a DIMM.

1. If you need to remove a DIMM module to make room for a higher-capacity one, reach in and push down on the tiny lever at the end of the DIMM slot.

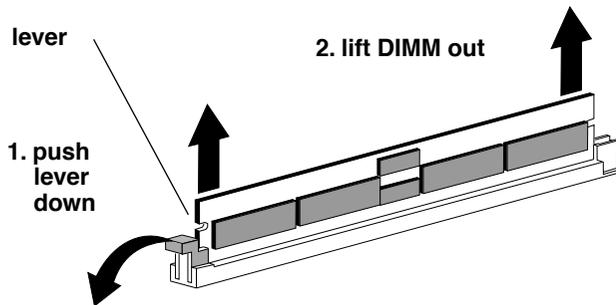


2. The DIMM should pop loose from the slot at the lever end.
3. If the DIMM module does not come free, press the DIMM lever down again.
4. Grasp the DIMM module with one hand at each end and pull the module up and out of the slot.
5. When you are finished with DIMM removal and insertion, replace the end panel (if you are removing RAM from a tower system), and replace the cover.

□ Inserting a DIMM

CAUTION! Touch the metal plate over the hard disk drive to discharge any static electricity that might have built up on your clothes or body.

Use a grounding strap and handle memory modules by the non-metallic edges only.

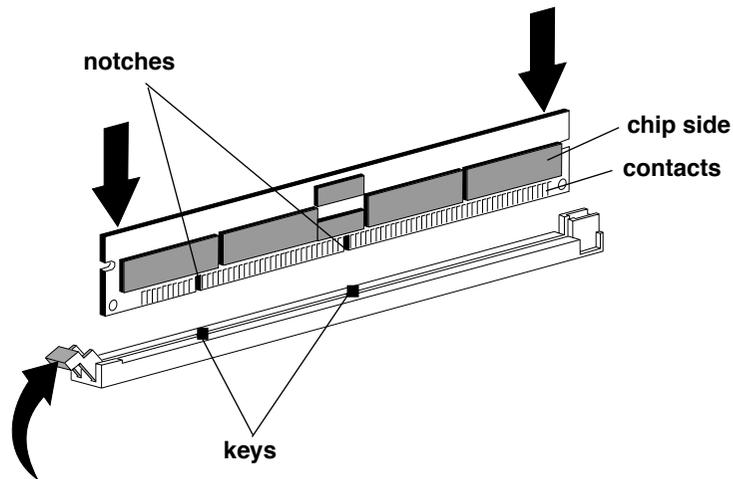

1. To insert a DIMM module, hold the module with one hand at each end with the contacts down and the chip side of the DIMM toward the front of the computer.

Notice that there are two notches in the contact edge of the DIMM module.

2. Lower the DIMM squarely into the slot so that the notches line up with the raised key areas of the DIMM socket.

Upgrading Your Computer

- 3. Slide the contacts straight into the slot and make sure the contacts are firmly seated in the slot.**

Don't force the DIMM module into the slot; if the motherboard starts bending significantly, pull the DIMM out, reposition it, and try again.

Note: Some DIMM modules have sharp, square edges which are difficult to get into the DIMM slot. If you have repeated difficulty getting the DIMM into the slot, you may need to return the DIMM modules to your vendor for replacement.

- 4. If the DIMM module is seated, the DIMM lever should rise so it lines up with the other levers.**
- 5. When you are finished, replace the end panel (if you are installing RAM on a tower system), and replace the cover.**

Adding VRAM


The video memory available to monitors connected to the standard PCI monitor ports is increased by installing video memory modules. Your computer is equipped by default with 2 MB of VRAM, which can be expanded to 4 MB by adding a 2 MB VRAM module.

CAUTION! **Touch the metal plate over the hard disk drive to discharge any static electricity that might have built up on your clothes or body.**

Use a grounding strap and handle memory modules by the non-metallic edges only.

Upgrading Your Computer

To add VRAM to the standard PCI video card, insert the legs of the VRAM module into the two sockets at the edges of the chip side of the video card, as shown below.

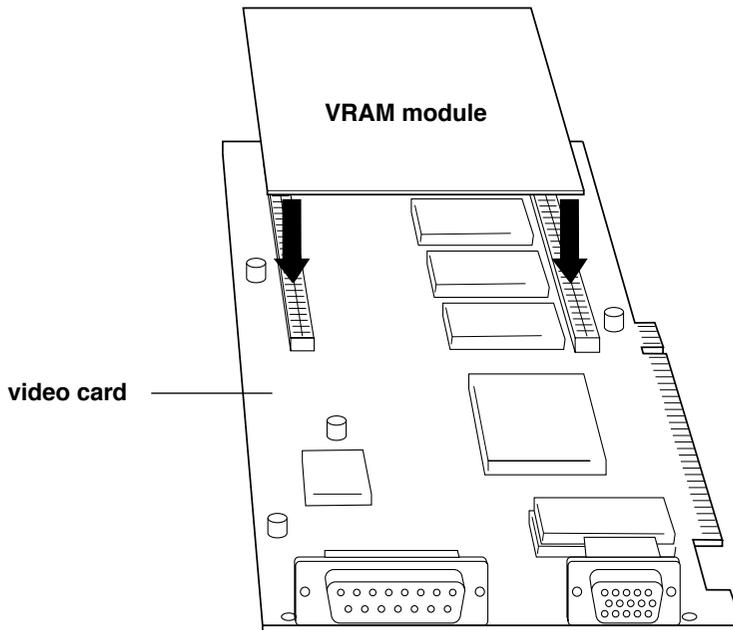

The amount of VRAM on your video card determines the number of colors that can be displayed on monitors of different sizes. See “VRAM configurations” on page 69 for tables listing the number of colors that can be displayed on various-sized monitors with different amounts of VRAM.


Installing internal drives


What you need to know about installing internal drives

In addition to the floppy disk drive and the built-in hard disk, the desktop computer has space for two 5.25-inch internal drives, such as additional hard drives, CD-ROM drives, or other removable-media drives. The tower has room for three. Standard 5.25 drives. With an adapter tray, 3.5 inch devices can be installed in these storage bays.

If your computer came with an internal CD-ROM drive, it is already installed in one of these bays.

The location of the 5.25 inch bays is shown below. For clarity, the illustration shows the computer with its front panel (*bezel* in engineerese) removed

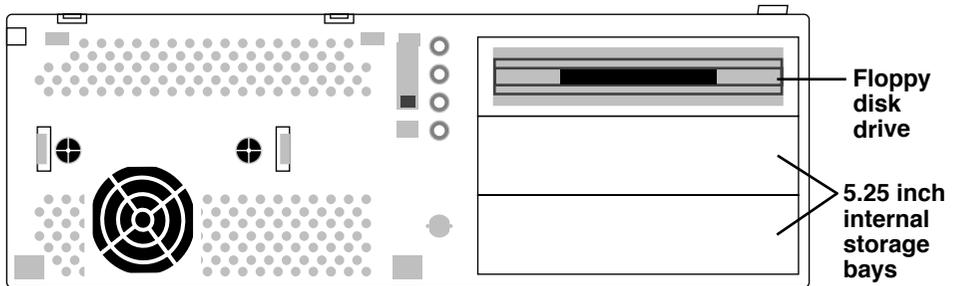

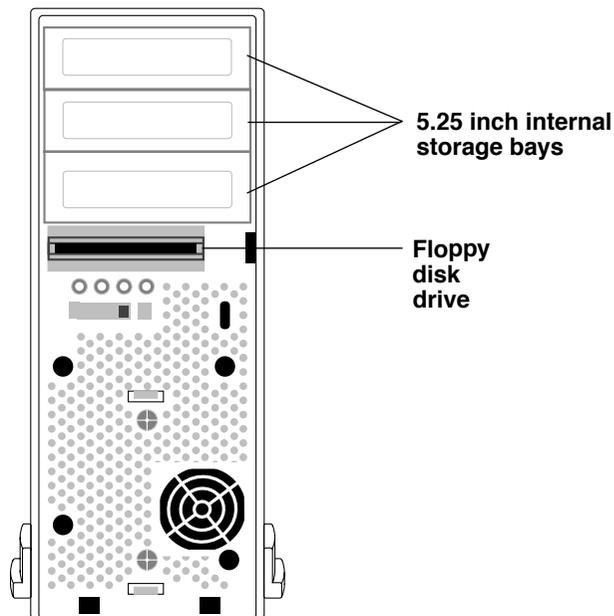

Rails for mounting internal devices are available from Power Computing for a nominal fee; contact our Sales Department at 1-800-999-7279. Rails, as well as adapter trays for installing 3.5 inch drives in the 5.25 inch bays are also available at most computer parts stores.

The PowerWave 120/132/150 uses an internal SCSI (Small Computer Systems Interface) bus to connect internal drives. For a more detailed discussion of how the SCSI bus on your computer is set up, see “Using SCSI devices,” starting on page 47. Pay particular attention to the discussion of SCSI termination, discussed in “Ensuring proper termination” on page 48.

Required tools

Small Phillips-head screwdriver

Drive rails, if not supplied with the drive

3.5 inch to 5.25 inch drive adapter tray, if you are installing a 3.5 inch drive.

Software drivers, if required

Installing drives

- CAUTION!** 1. If you are not proficient with electronic equipment, Power Computing Corporation recommends that you have a certified technician install internal drives. If you attempt to install an internal drive yourself, any damage you may cause to your equipment will not be covered by the limited warranty on your computer. Please call technical support at 1-800-708-6227 for additional information about this or any other warranty question.
2. If an anti-static bracelet is available, put it on and ground it to your computer before touching any components inside the computer.
3. Handle drives carefully and avoid touching their contacts or moving parts.
4. Always store drives in conductive bags.
5. Take your time; don't push yourself.

□ Prepare the drive

1. Set SCSI ID

Following the instructions which came with your device, set its SCSI ID. Replacement drives provided by Power will normally come with SCSI ID pre-set to 0 for the primary hard drive, 1 for an optional second hard drive, and 3 for a CD-ROM drive or a removable-cartridge drive.

Each device in a SCSI chain requires a unique number called a SCSI ID, which the computer uses to identify the device. The computer itself is assigned SCSI ID 7 and the primary internal hard disk is assigned SCSI ID 0. Every other device you install must have a unique number from 1 to 6.

To determine what SCSI IDs have already been assigned to which devices, go to the **Hard Disk Toolkit™ PE** folder in the **Utilities** folder on your hard disk and run **HDT Primer™ PE**. HDT Primer will scan your SCSI bus and display the SCSI ID, name, and other parameters of all of the SCSI devices on the bus (see example below).

The screenshot shows a window titled "HDT Primer™ PE" with a table of SCSI devices. The table has columns for ID, Volume, Capacity, and Volume Label. The first row is highlighted in black and contains a hammer and pickaxe icon, ID 0, Internal HD, 258 MB, and QL. The second row has ID 1, the third has ID 2, and the fourth has a red and white icon.

ID	Volume	Capacity	Volume Label
0	Internal HD	258 MB	QL
1			
2			

Since your computer has two SCSI buses, one internal and the other external, make sure to scan the *internal* one by selecting **Bus 0: Apple [Internal]** under HDT Primer's **SCSI Bus** menu. For details on HDT Primer, see "Launching HDT Primer PE," starting on page 98.


2. Install a 3.5 inch drive in a 3.5 to 5.25 inch adapter tray

Since the internal drive bays are designed to accommodate 5.25 inch drives, if you are installing a 3.5 inch drive, you will need to mount it in a 3.5 to 5.25 inch adapter tray. 3.5 to 5.25 inch adapter trays are available at most computer parts stores.

Upgrading Your Computer

3. Install rails

Drives are held in place in the computer chassis by plastic rails mounted on each side, which fit into a mounting track in the chassis. Some drives come with rails already installed. See illustration below.

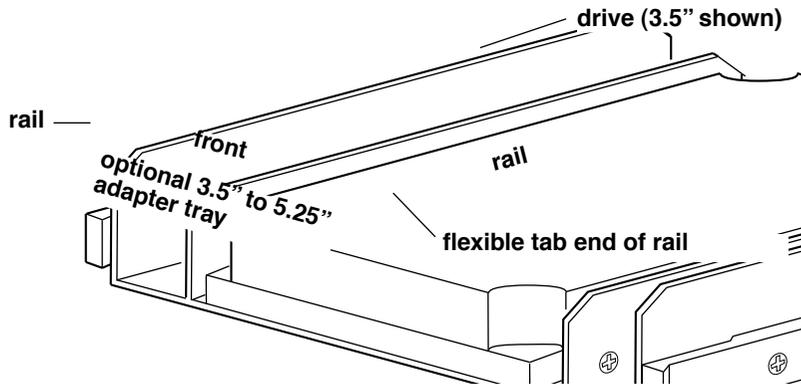

If you purchased your drive from Power Computing, the tracks should be included and are probably already attached. If for some reason your Power Computing drive came without rails, call Power Computing Customer Support at 1-800-671-6227.

If rails did not come with your drive, they are available from Power Computing for a nominal fee through our Sales Department at 1-800-999-7279. Rails, as well as adapter trays for installing 3.5 inch drives in the 5.25 inch bays are also available at most computer parts stores.

If rails are not attached to the sides of your drive or adapter tray, attach one rail to each side of the drive (or the adapter tray if you are installing a 3.5 inch drive) using the screws supplied with the rails. Rails should be attached with the flexible tabs toward the front of the drive and the tracks facing out. See the illustration above.


□ Prepare the computer

1. If you haven't done so, remove the cover from the computer.

See "Removing the cover," starting on page 15 for instructions.

WARNING! Make sure the computer has been shut down before removing the cover.


2. Before touching any components inside the computer, touch the metal plate over the hard disk drive to discharge any static electricity that might have built up on your clothes or body.

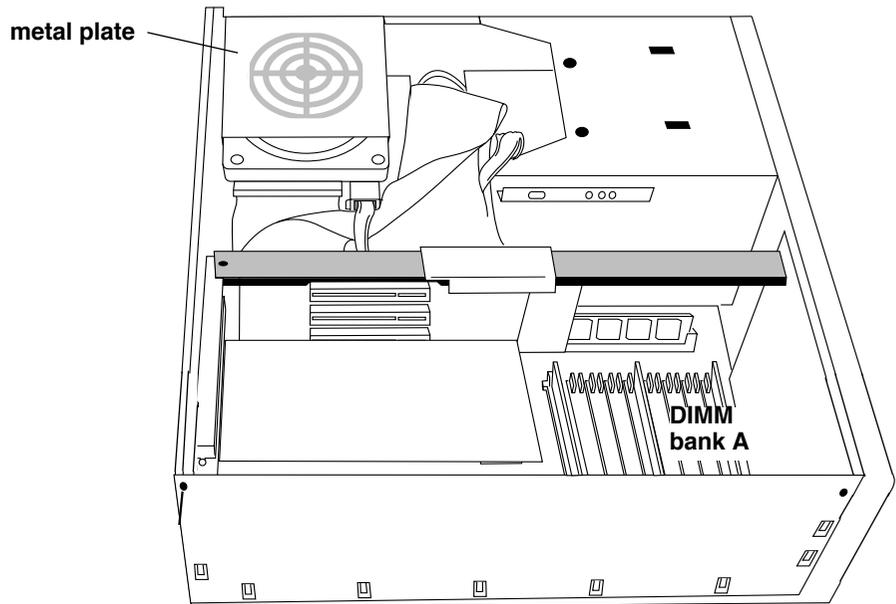


3. Disconnect the speaker connector, which is on the motherboard to the right of DIMM bank A.

Upgrading Your Computer

- Starting with the primary bezel tab, push down on the tabs (3 tabs on the desktop system; 4 on the tower) which hold the bezel in place (see illustrations below) and pull the long tabbed side of the bezel away from the case until the tabs on the other side of the bezel clear the front of the computer.

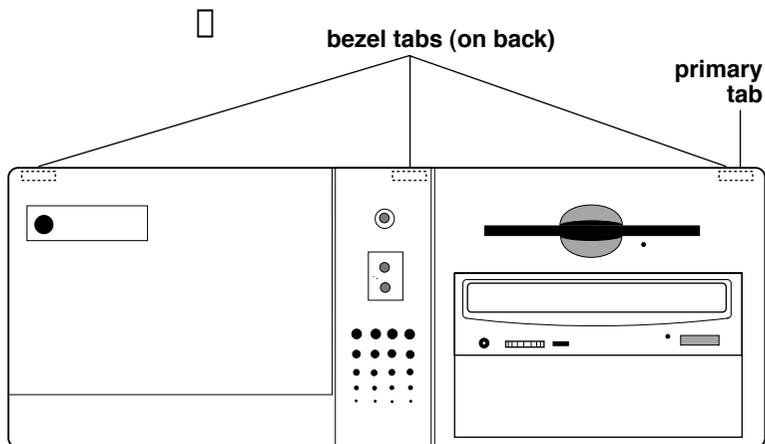

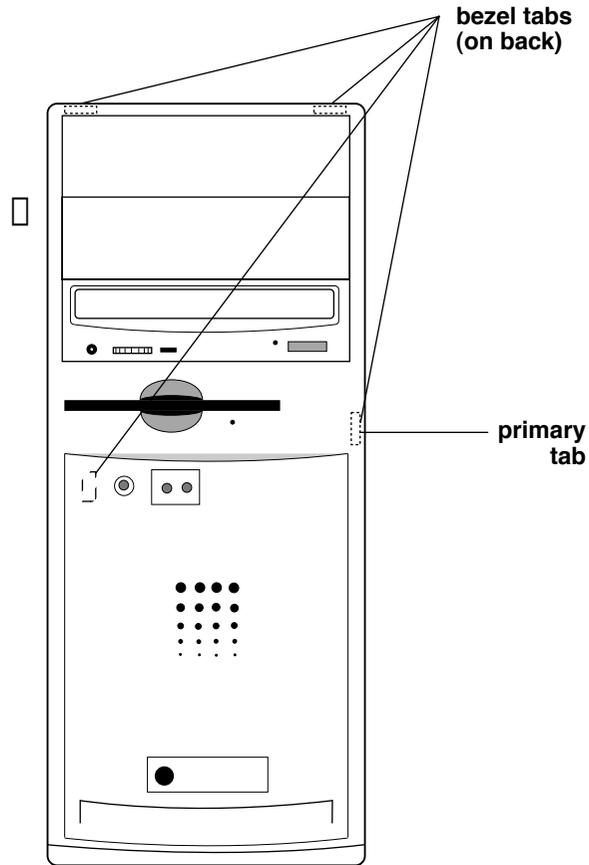


- 5. Pull the speaker cord out through the hole in the front of the computer and set the bezel down away from the computer.**


This step may not be necessary if your speaker cord is long and you have room for the bezel near the computer.

Upgrading Your Computer

6. If you are installing a CD-ROM drive or other drive with removable media, remove the plastic insert covering the bay you are planning to use from the bezel. To remove the insert, press down on the plastic tab at one end of the insert and pivot the insert out (see illustrations below).

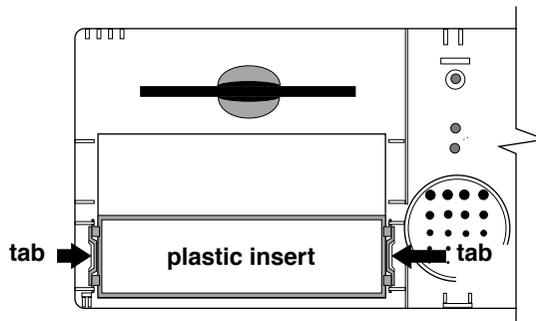


Desktop Bezel, rear view

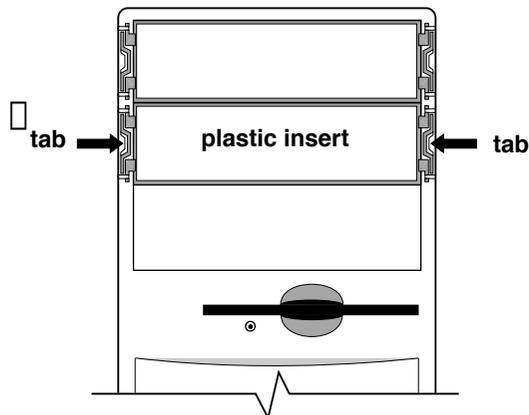

Tower Bezel, rear view

7. **Unscrew the two screws holding the metal bay cover, if there is one, in front of the drive bay and set the plate and screws aside where you will be able to find them later.**

If you are installing a drive that does not use removable media, you will need to replace this plate after you have installed the drive.

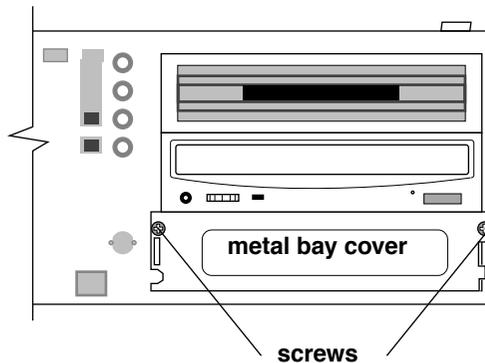

Note: The slot under the floppy drive on the desktop model and the top slot on the tower drive may have a metal plate without screws, which is attached by two thin strips of metal. To remove *that* type of plate, simply bend it back and forth several times until it comes loose, and remove it.


□ Install the drive

Once you have prepared the drive (see “Prepare the drive,” starting on page 35) and the computer (see “Prepare the computer,” starting on page 37), you are ready to install the drive.


Note: Connectors are keyed, which means that there is only one correct way to mate them. If a cable is very hard to connect, examine it carefully to make sure you have it oriented so that it fits the connector it goes onto. Once cables are connected, make sure they are snug.

Upgrading Your Computer

1. Slide the drive into the bay (see illustrations below), being careful not to crimp or fold any cables. The drive rails slide into the tracks on the side of the bay and the rails snap into place when the drive is all the way in.

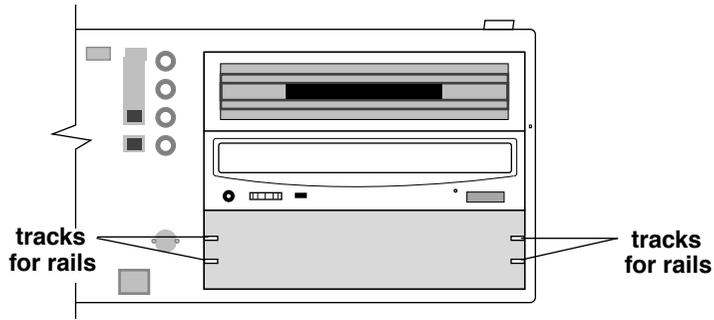

Desktop Drive Bay


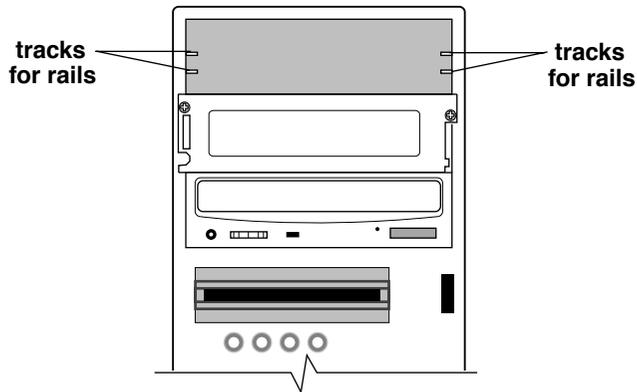


Tower Drive Bay

2. Connect one of the unused connectors on the SCSI cable to the wide connector on the drive (see illustration below).

Find the internal SCSI cable inside the computer (it is the wide flat ribbon cable connected to the hard drive). The internal SCSI cable should have one or two unused connectors on it. You may have to detach and re-attach the SCSI connectors on one or more other drives to get connectors where you need them. Remember, this is SCSI, so the ends have to be terminated. See “Ensuring proper termination” on page 44 for details.

Note: There is a *key* in the middle of the top of the SCSI connector and a *notch* in the cable connector which matches the key, to ensure that the cable is not plugged in upside down. If the cable resists being plugged in, check to make sure the key and slot are mating correctly.

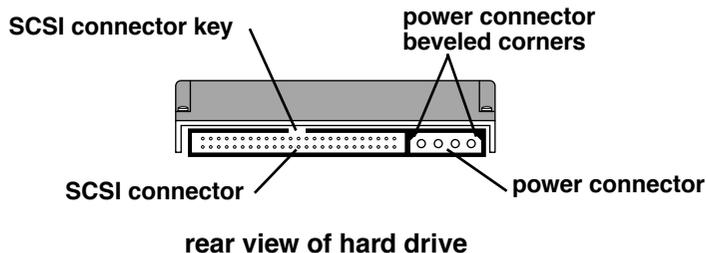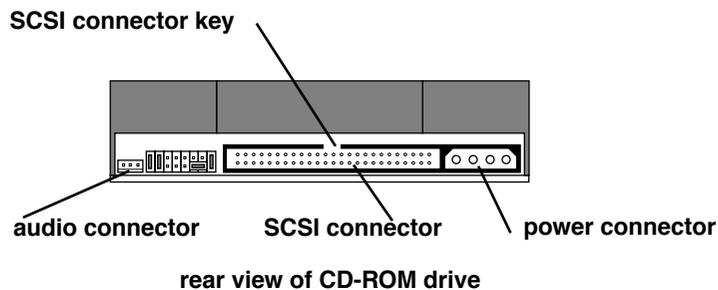

3. Find an unused four-pin power cable in the set of cables coming from the power supply (the power supply is in the right rear of the computer, on the bottom) and connect that cable to the rear of the drive, being careful to match the beveled corners of the plug to those of the socket (see illustration above).

Check the instructions that came with the drive for jumper or switch settings and check to make sure that they are properly set before going to the next step. Make sure the connectors are snug.

Upgrading Your Computer

4. If you are installing a CD-ROM drive,

Connect the small white 3-pin end of the CD-ROM cable firmly to the keyed 3-pin audio connector on the CD-ROM drive,

The 3-pin audio connector is keyed; if you have trouble getting it on, try turning it over.

Connect the larger, 4-pin connector firmly to the four-pin connector on the motherboard, labeled CD SND INPUT.

The **CD SND INPUT** connector is near the drive bay edge of the motherboard, next to the battery and the floppy drive data cable connector.

Connect the four-pin audio connector so that the lip on the 4-pin connector faces the drive bay side of the motherboard. Make sure all four pins are enclosed in the connector.

5. If the drive does not use removable media, replace the metal cover plate in front of the drive.

6. Lift the bezel up to the front of the computer, thread the speaker cord back through the hole in the front panel, re-connect the speaker cord to the motherboard, and replace the bezel.

7. Replace the cover, reconnect system components, turn main power back on, and restart the computer.

8. Install software drivers

Some SCSI devices require special software called device drivers to operate with your computer. If a device driver is required, it is normally supplied with the device; if you are unsure whether one is required, contact the manufacturer of the device. Follow the driver installation instructions supplied by the manufacturer. If a device driver is not supplied, you can generally assume that the device does not need one. The drives pre-installed in your system have pre-installed drivers.

If the drive does not work,

1. Make sure that any required drivers are properly installed. See the drive's documentation for more information.

2. Turn the system off, unplug the system components, and remove the cover.

3. Make sure that the drive's SCSI connector is plugged in and seated firmly.

If the connection seems loose or crooked, check to make sure that no pins are bent and that the connection is keyed properly. Bent pins may be carefully straightened with a very small screwdriver.

4. **Make sure that the drive's power cable is plugged in and seated firmly.**
5. **Make sure that each device in the internal SCSI chain has its own unique SCSI ID: the primary hard drive should be set to ID 0 and the CD-ROM is normally set to 3. (See "Set SCSI ID" on page 35.)**
6. **Make sure there are no internally-terminated devices in the in the middle of the SCSI chain. The only internally-terminated device on the internal SCSI chain should be the pre-installed primary internal hard drive.**
7. **Replace the computer's cover, re-connect system components, and restart the computer.**

If these steps do not correct the problem, contact the drive manufacturer or Power Computing Technical Support at 1-800-708-6227 for assistance.

Upgrading Your Computer

Chapter

4 Connecting Peripheral Devices

Your computer has a number of ports for connecting peripheral devices such as printers, storage devices, audio equipment, network cabling, and modems.

See “PowerWave 604 Overview” on page ix at the beginning of this manual for the location of the ports.

Using SCSI devices

Your computer has two separate SCSI buses—one for the internal devices like the hard disk and the optional CD-ROM drive and another for external devices. You can connect up to seven devices in a *SCSI chain* to each bus.

Connecting a SCSI device involves four steps:

- Setting the device’s SCSI ID number
- Ensuring proper termination
- Connecting the device
- Installing a software device driver (if one is required)

Setting the SCSI ID

Each device in a SCSI chain requires a unique number called a SCSI ID, which the computer uses to identify the device. The computer itself is assigned SCSI ID 7 and the internal hard disk is assigned SCSI ID 0. Every other device you install must have a unique number from 1 to 6. An optional hard drive is normally assigned a SCSI ID of 1, a tape drive is normally assigned 2, and a CD-ROM drive or removable-media drive is normally assigned SCSI ID 3.

Devices on the external bus must have a unique SCSI ID from 0 to 6.

The way you assign SCSI IDs varies from device to device. On most external devices, the ID is displayed on the back of the device. You usually change it by pressing small buttons above or below the number display. For some external and most internal devices, changing the ID requires setting switches or moving jumpers. Refer to the documentation that came with the device for exact instructions.

Connecting Peripheral Devices

The important thing to remember is that each device must have an ID that is unique within its bus. If there is an ID conflict, your computer and the SCSI devices connected to it will malfunction.

Ensuring proper termination

For a SCSI chain to work properly, it must be terminated correctly. The basic rule about SCSI termination is simple: the device at the end of the chain must be *terminated*. Devices located between the computer and the end of the chain must be unterminated.

On the internal SCSI bus, any devices you install should be unterminated because the computer's hard disk at the end of the bus is terminated and all of the internal connectors are in the middle of the chain.

On the external bus, you need to consider where the device is placed in the chain and whether it has an internal terminator. (Most SCSI devices use removable external terminators, but some older devices have built-in terminators that are difficult to remove.)

- If you have an internally terminated device, place it at the end of the chain and remove external terminators from other devices in the chain.
- If none of the devices is internally terminated, place an external terminator on the last device in the chain and on no other device.

See the documentation that came with each device for information about how it is terminated.

Connecting the device

Connecting an external SCSI device

The external SCSI port, marked with , provides high-speed communication between the computer and devices such as hard disks, CD-ROM drives, scanners, printers, tape backup drives, and so on.

To connect a single SCSI device (or the first device in a chain), you need a SCSI cable with a 25-pin connector on one end and a 50-pin connector on the other. For each additional cable, you need a cable with 50-pin connectors on both ends. The cables you use should be double-shielded and have approximately 110-ohm impedance. Most SCSI problems are the result of low-grade cables.

Note: External SCSI devices which are connected to the computer must be turned on. Devices on the SCSI bus which are turned off can cause system errors.

To connect an external SCSI device:

1. Shut down the computer and the SCSI device.

2. Make sure that the device has a unique SCSI ID from 0 to 6.
3. Connect the device to the computer's SCSI port or to the last device in the chain using the appropriate cable.
4. Make sure that the last device in the chain is terminated.

Some devices require an external terminator, while others are internally terminated.

When you are ready to start up, turn on your SCSI devices before you turn on the computer. If you do not, your computer will not recognize the devices.

Connecting an internal SCSI device

You install internal SCSI devices in one of the computer's internal storage bays. See "Installing internal storage devices" in Chapter 3 for an illustration of the location of these bays. Contact Technical Support for more information about installing internal SCSI devices.

Installing software device drivers

Some SCSI devices require special software called device drivers to operate with your computer. If a device driver is required, it is normally supplied with the device; if you are unsure whether one is required, contact the manufacturer of the device. Follow the installation instructions supplied by the manufacturer. If a device driver is not supplied, you can assume that the device does not need one.

Connecting a printer

Your computer has a port (marked with ) . This port can be used for direct printer connections or for LocalTalk network printer connections.

You can also connect a printer to the modem port (marked with ) . Use the Chooser program to tell the MacOS which port you are using. See Macintosh Guide for information about the Chooser.

To connect the printer, follow the instructions that came with it.

Connecting input devices

Use the computer's ADB port (marked with ) to connect input devices such as a mouse, trackball, graphics tablet, or bar-code reader. Depending on their power consumption, you can connect up to three input devices in a chain from the ADB port.

The total power used by all the ADB devices must not exceed 500 milliamperes (mA). Check the documentation that came with your ADB devices for information about their power consumption.

Connecting Peripheral Devices

Connecting a modem or telecom adapter

Your computer is equipped with an enhanced telecommunications port (marked with ) which can be used with a standard modem or the Apple GeoPort Telecom Adapter. The GeoPort Telecom Adapter offers advanced communications features not available with standard modems. It is available from authorized Apple dealers.

To connect a modem or GeoPort Adapter, follow the instructions that came with it.

Connecting to a network

Your computer has built-in support for two different networking systems—LocalTalk and Ethernet. Other networking systems are possible, but they require expansion cards.

Use the Network control panel in MacOS to choose a networking system. See Macintosh Guide for information about using your computer on a network.

Connecting to a LocalTalk network

Use the computer's printer port (marked with ) to connect to a LocalTalk network. LocalTalk connectors and cables are available from several vendors. Follow the instructions that came with the connector and cabling.

Connecting to an Ethernet network

The computer has two built-in ports (marked with ) for connecting to high-speed Ethernet networks. Using the appropriate AAUI adapter, you can connect to standard Ethernet wiring such as 10BaseT, thick coax, and thin coax. Adapters are available from several vendors. Follow the manufacturer's instructions for connecting the adapter. If you are connecting to a 10BaseT network, you can plug the network RJ45 connector into the 10BaseT port.

If both the AAUI and the 10BaseT connectors are connected, the 10BaseT connection will be used by default.

Connecting to a Token Ring network

You can connect to a Token Ring network by installing an expansion card and appropriate networking software. Token Ring cards and software are available from several vendors.

Using audio equipment

Using the sound in and sound out ports of your computer, you can record and play high-quality stereo audio. You can connect audio devices such as microphones, stereo equipment, and speakers. (You can also use an external or internal CD-ROM drive to play audio CDs. See "Playing audio CDs on a CD-ROM drive" on page 53 later in this section.)

Understanding the sound ports

Your computer has two sound ports—a sound output port (marked with ) and a sound input port (marked with ). Use these ports to connect audio devices.

The sound ports accept a connector called a *stereo mini-plug*, the same kind of connector used to connect headphones to a personal stereo. If an audio device has a different kind of connector, you can buy an adapter at an electronics store.

Connecting an audio device

To play or record sounds, connect an audio device to your computer.

- If you want to use your computer to work with the sound produced by a device like a microphone, CD, or tape player, attach it to the sound input port.
- If you want to use a device such as a tape recorder or external speakers to work with sound produced by the computer, attach it to the sound output port.

A device that can both record and play (such as a tape deck) can be connected to both the sound input and sound output ports.

The following section gives general instructions for connecting an audio device. If you plan to connect a microphone or external speakers, read “Connecting a microphone” on page 53 or “Connecting external speakers” on page 52 later in this section.

Connecting Peripheral Devices

To connect an audio device:

1. **Make sure that the device has a stereo mini-plug connector. Attach an adapter if necessary.**
2. **Shut down your computer and turn off the audio device.**
3. **Connect the audio cable to the device and to the appropriate sound port of the computer.**
4. **Turn on the computer and the device.**

After starting up the computer, use the MacOS Sound control panel to select the device as the **Sound In** or **Sound Out** source. See the Macintosh Guide for information about using the **Sound** control panel.

Connecting external speakers

You can connect external, amplified speakers to your computer to take advantage of its high-quality, stereo sound output.

You need a cable with stereo mini-plugs on each end to connect the speakers. In some cases, you connect the cable to one of the speakers and then use speaker wire to connect the second speaker. In other cases, you use a Y-shaped, two-plug adapter on the end of the cable and attach one plug to each speaker. Refer to the instructions that came with the speakers for more information.

To connect external speakers:

1. **Turn off the computer and the speakers.**
2. **Connect one end of the cable to the sound output port of the computer.**
3. **Connect the other end of the cable to the speakers.**
If necessary, use a Y-shaped adapter.
4. **If necessary, connect the speakers with speaker wire.**
5. **Turn on the computer and speakers.**


The sound output of the computer is heard through the speakers.

You can control the speaker volume in the Mac MacOS **Sound** control panel. In some cases, the speakers themselves may also have a volume control. See the Macintosh Guide for information about controlling the volume.

Connecting a microphone

You can connect a microphone to your computer via the sound input port. The microphone can be used for recording sounds or for issuing spoken commands to your computer.

The computer requires the Apple PlainTalk Microphone, pictured below. PlainTalk software is required for voice commands. PlainTalk microphones and software are available from authorized Apple dealers.

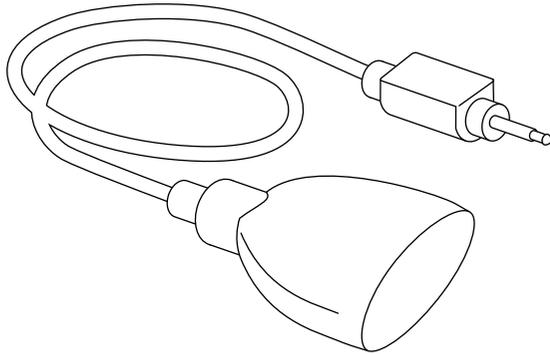


Playing audio CDs on a CD-ROM drive

You can use a CD-ROM drive to play audio CDs on your computer. The sound will be heard through the computer's built-in speaker (or through external speakers if you have them).

Use audio CD software (such as AppleCD Audio Player, part of the MacOS) to play the CD and the **Sound** control panel to select the CD-ROM drive and control the volume. If you use headphones plugged into the front of the CD-ROM drive, volume can be adjusted using the volume control next to the headphone plug.

To check the **Sound** settings open the **Sound** control panel and select **Sound In**. Click on the **Options** button and make sure that **Internal CD** and **Playthrough** are selected. See the Macintosh Guide for further information about playing audio CDs on a CD-ROM drive.

Connecting Peripheral Devices

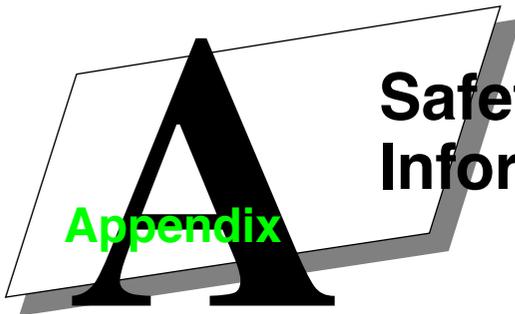A large, stylized letter 'A' in black, with a green 'Appendix' text overlaid on its left side. The 'A' is set against a white background with a grey shadow effect.

Safety and Health Information

Appendix

Use this appendix to learn about safety and health issues related to computer use.

Safety instructions

Follow these guidelines to protect yourself from electrical shock:

- Plug the computer into a grounded, three-hole outlet. Do not use a three-hole adapter in a two-hole outlet.
- Do not use your computer if the power cord is frayed or damaged.
- Keep the computer away from moisture and liquid. Do not use it if you spill liquids on it.
- Turn off the computer before removing its cover.
- Never operate the computer without its cover.
- Follow the safety instructions in this manual. A *warning* alerts you of a potential health or safety hazard. A *caution* notice alerts you of potential harm to your computer or its components.

Health-related information about computer use

The way you set up and use your computer can affect not only your productivity but also your comfort and well-being. No set of guidelines can cover every situation, but if you follow a few common-sense suggestions, you can prevent the eye fatigue and musculoskeletal discomfort sometimes experienced by computer users.

Preventing eye strain

Whenever you focus your eyes on a nearby object for a long time—whether you are reading, sewing, or working on a computer—your eyes can get tired. Follow these suggestions to prevent eye strain:

- Take frequent breaks. Periodically look away from the screen and focus your eyes on something farther than 20 feet away.

Safety and Health Information

- To prevent glare on the screen, avoid working with a window or light source behind you. Turn off lights or close drapes if necessary.
- Place your monitor, chair, and work table so that the top of the monitor is slightly below the top of your head and the screen is 18-28 inches away from you. This may require placing something under the monitor.

Preventing discomfort and fatigue

Like any activity that involves sitting for long periods of time, using a computer can make you tired and stiff. In addition, using a keyboard and mouse improperly can sometimes be associated with RSIs (repetitive stress injuries), particularly in the wrists. Follow these suggestions to prevent discomfort:

- Take frequent breaks. Stand up, stretch, and walk around. These breaks are not wasted time. They help you work more effectively in the long run.
- Adjust your chair so that your lower back and thighs are supported and your feet are flat on the ground (or on a footrest).
- Adjust your chair and work table so that you can type and use the mouse with your elbows at a 90° angle, your forearms level, and your hands in a straight line with your forearms. A work table equipped with an adjustable keyboard tray may make this easier.
- Do not place your wrists on the hard edge of your table. Use a wrist pad.
- Sit up straight in your chair. Slouching puts unnecessary strain on your back.
- Do not strike the keys any harder than necessary.

B Troubleshooting

Appendix

If you have a problem using your computer, use the suggestions in this appendix to identify the source of the trouble.

If you are unable to resolve a problem using these suggestions, follow the instructions at the end of the chapter to get technical support. **Power Computing's Technical Support Department can be reached toll-free in the United States at 1-800-708-6227.**

Restarting the computer

You can eliminate some common problems by restarting the computer, which clears the computer's memory.

- If the mouse is still working, choose Restart from the Special menu. If an error dialog box is displayed, it may have a Restart button.
- If the mouse is not working, try holding down the ⌘ and Control keys while pressing the Power On key. This key combination restarts the computer, but should only be used when you cannot use the Restart menu command.
- If you cannot restart the computer from MacOS, use the Reset button on the front panel. See "PowerWave 604 Overview" on page ix at the beginning of this manual for the location of the button. Be careful not to confuse the Reset button with the Interrupt button, used by programmers.
- If the Reset button does not work, use the power button on the front panel to turn off the computer. Wait at least ten seconds before turning it back on. (You need to wait to give the hard disk time to spin down.)

Problems and solutions

This section lists some problems you might experience along with suggestions for solving them.

The monitor is dark after you turn on the computer.

- Follow the suggestions under “Problems starting up” on page 9.

You see a question mark icon instead of the MacOS desktop when you start up.

- There may be a problem with a SCSI device connected to the computer. Disconnect all the external SCSI devices, then restart your computer. If your computer starts up normally, verify that the SCSI devices are connected and terminated properly, and that all devices in each bus have unique SCSI IDs. See “Using SCSI devices” on page 47 for more information.
- System software is not installed on the computer. Follow the instructions in “Reinstalling system software” on page 64 to install the software.

A blinking question mark icon appears when you start up.

The blinking question mark indicates that the computer cannot find its system software. This may indicate a problem with the start-up disk or a problem with the system software.

- Start up your computer from the Disk Tools floppy disk or Power Computing MacOS CD-ROM. Use the Disk First Aid program to check and repair your disk. (See the Disk First Aid entry in Macintosh Guide for instructions.)
- If repairing the disk does not solve the problem, reinstall the system software as described in “Reinstalling system software” on page 64.

A floppy disk icon with an X in it appears.

You inserted a non-start-up floppy disk during the start-up process. If you wait a few seconds, the computer will start up normally from the hard disk. Remember to insert floppy disks only after the start-up process is complete—when the MacOS desktop is visible.

An icon with a sad face appears when you start up.

This can indicate a problem with the system software or with the computer hardware.

- Try starting up from a different disk—the Disk Tools floppy disk or the Power Computing MacOS CD-ROM, for example. If you can start up with a different disk, it means that there is a problem with your system software.
- If the sad face icon continues to appear, contact an authorized service provider. There is most likely a problem with the computer hardware.

A hard disk icon does not appear on the MacOS desktop.

- If the start-up hard disk is internal, restart your machine.
- If the hard disk is external, verify that it is connected and terminated properly, and that it has a unique SCSI ID. Make sure that there are no SCSI ID conflicts. See “Using SCSI devices” on page 47 for information.
- If the disk is your start-up disk, start up your computer from the Disk Tools floppy disk or Power Computing MacOS CD-ROM. You can remove the internal drive from the startup sequence (and force your system to boot from a floppy or the CD-ROM if you have it in place) by holding down the **shift**, **option**, **command**, and **delete** keys (the **command** key also called the  key) when you start up. Use the Disk First Aid program to check and repair your disk. (See the Disk First Aid entry in Macintosh Guide for instructions.) If repairing the disk does not solve the problem, reinstall the system software as described in “Reinstalling system software” on page 64.

You cannot read a floppy disk.

This can indicate a damaged disk or one that is not initialized.

- If a floppy disk has never been used, it may not be initialized. See Macintosh Guide for instructions on how to initialize disks.
- If the disk is damaged, try using the Disk First Aid program to repair it. See Macintosh Guide for instructions about using Disk First Aid.

The mouse pointer does not move when you move the mouse.

This can indicate a system software problem, a problem with your mouse, or a problem with a program that you are running.

- Turn off the computer and verify that the mouse is connected properly. See “Connecting the mouse and keyboard” on page 6 for information.
- Try using a different mouse or input device. If it works, there is a problem with the original mouse.
- Try using a different start-up disk—the Disk Tools floppy disk or the Power Computing MacOS CD-ROM, for example. If the mouse works, there is a problem with the system software on your normal start-up disk. Reinstall the system software as described in “Reinstalling system software” on page 64.
- If the problem continues, you may be using an incompatible program. Verify that the applications, system extensions, and control panels on your computer are compatible with your system software.

No characters appear on the screen when you type.

- Use the mouse pointer to click in the window in which you want to type. This ensures that the program is active and that you have an insertion point for your text.

Troubleshooting

- Shut down the computer and verify that the keyboard is connected properly. See “Connecting the mouse and keyboard” on page 6 for information.
- Try using a different keyboard. (Turn off the computer before switching keyboards.)
- Try using a different start-up disk—the Disk Tools floppy disk or the Power Computing MacOS CD-ROM, for example. If the keyboard works, there is a problem with the system software on your normal start-up disk. Reinstall the system software as described in “Reinstalling system software” on page 64.

You see a dialog box with a bomb.

This indicates a software problem.

- If there is a number in the dialog box, write it down for future reference. Make note of what you were doing when the error occurred.
- Restart the computer. See “Restarting the computer” on page 57 earlier in this appendix.
- Verify that the applications, system extensions, and control panels on your computer are compatible with your system software. You may need to update some of your software.
- Restart your computer without extensions. (To restart without extensions, hold down the Shift key as you restart.) If your software works properly, you probably have an incompatible system extension or control panel. See Macintosh Guide for information about using the Extensions Manager control panel to isolate the problem.

You cannot launch a program or it quits unexpectedly.

This usually indicates that there is not enough RAM for the program to run. A dialog box may appear, indicating insufficient memory as the source of the problem.

- Quit programs to free up memory, then launch the application you want to use.
- Restart the computer to clear memory. See “Restarting the computer” on page 57, at the beginning of this appendix.
- Use the Get Info window to allocate more memory to the program. See Macintosh Guide for information about Get Info.
- Turn on virtual memory to use some of the computer’s hard disk space as RAM. See Macintosh Guide for information about turning on virtual memory.
- Install additional memory modules. See “Increasing memory” on page 23 for information.

Contacting Technical Support

If you have a problem with your computer that you can’t resolve with the information in this manual and appendix, contact Technical Support at 1-800-708-6227 for assistance.

C Installing System Software

Appendix

MacOS system software was preinstalled on your computer's hard disk. Under normal circumstances, you should not have to reinstall system software.

If a problem occurs—for example, if you see a question mark icon on the screen when you try to start up—you may need to reinstall the system software.

Starting up

MacOS software is supplied in two formats:

- If you purchased the computer with a built-in CD-ROM drive, system software is supplied on a CD-ROM disk.
- If you purchased the computer without a CD-ROM drive, system software is supplied on a set of floppy disks.

You must start up from the CD-ROM disk or from the Install Me First floppy disk before installing the system software.

To start up from a CD-ROM:

1. Turn on your computer.
2. Place the MacOS disdiskc label side up into the CD-ROM tray, then close the tray.

The computer starts up and displays the MacOS desktop.

Note: You should only use the CD-ROM disk to start up when your normal start-up disk is malfunctioning or when you need to install system software. You can remove the internal drive from the startup sequence (and force your system to boot from a floppy or the CD-ROM if you have it in place) by holding down the **shift**, **option**, **command**, and **delete** keys (the **command** key also called the  key) when you start up.

To start up from the Install Me First floppy disk:

1. Insert the disk into the floppy drive, then turn on your computer.

The computer starts up and automatically displays the Installer screen.

Reinstalling system software

Once you have started your computer, you can use the Installer program to reinstall the system software.

- 1. If you started from a CD-ROM, double-click the Install System Software icon to start the Installer.**

If you started from the Install Me First floppy disk, the Installer application starts automatically.

- 2. Click OK in the introductory dialog box.**

The Install dialog box appears, displaying a list of software and the hard disk on which it will be installed.

- 3. If you want to install on a different hard disk, click the Switch Disk button until the correct disk appears.**

- 4. Click Install.**

A status bar informs you of the progress of the installation. If you are installing from floppy disks, insert disks when the Installer prompts you. A dialog box informs you when the installation is complete.

- 5. Click Restart in the dialog box to start up your computer from the hard disk.**

- 6. If you have an optional CD-ROM drive and it is not operating properly, you may need to re-install the CD-ROM driver software.**

To re-install the CD-ROM driver software:

- A. Start your computer with the Power Computing MacOS CD-ROM disk in the CD-ROM player.**
- B. Open the Bundled Software folder on the CD-ROM drive.**
- C. Open the CD-ROM Toolkit™ folder.**
- D. Double-click on the CD-ROM Toolkit Installer icon and follow the instructions to re-install the CD-ROM Toolkit.**

If CD-ROM drive will not work, place the Power Computing MacOS CD-ROM disk in another CD-ROM player and copy the CD-ROM Toolkit files from the CD-ROM disk to a floppy disk; then insert the floppy into your Power Computing system and install the CD-ROM toolkit software from the floppy disk.

D Technical Information

Appendix

This appendix contains technical information and specifications for the PowerWave 604/120, 604/132, and 604/150 computers.

Specifications

Processor (upgradeable via daughtercard)

- PowerPC 604 at 120 MHz (Model 604/120)
- PowerPC 604 at 132 MHz (Model 604/132)
- PowerPC 604 at 150 MHz (Model 604/150)

Memory

- Minimum 16 MB RAM, expandable to a maximum of 512 MB, interleaved
- 4 MB read-only memory (ROM)
- 256 bytes of non-volatile parameter memory
- 256 KB of static RAM used as a Level 2 cache for the PowerPC processor (upgradeable to 512KB or 1MB)

Disk drives

- 1.4 MB high-density MFM/GCR floppy disk drive supporting Mac OS, DOS and ProDOS diskettes
- Internal SCSI hard disk drive, 540 MB to 4 GB
- Internal 4X CD-ROM Drive

Video

- High performance 64-bit PCI video card
- Refresh rate up to 120 MHz
- On-the-fly resolution switching
- 2 MB VRAM, expandable to 4 MB on standard PCI video card

Technical Information

Audio system

- Stereo sound generator capable of driving stereo mini-plug headphones or audio equipment
- Stereo sampling hardware for recording samples
- 16-bit stereo in and out
- Sample rates of 44.1 kHz, 22.05, and 11.025 kHz
- Input line level: 2 volts peak-to-peak nominal into 6.5 k Ω
- Input through output signal-to-noise ratio: >86 decibels (dB) with no audible discrete tones
- Bandwidth: 10 Hz–19 kHz (+/- 2 dB) at 44.1 kHz sample rate
- Total harmonic distortion plus noise: Less than 0.06%, measured 30 Hz–60 kHz with a 2 V p-p sine wave input

Interfaces

- Dual SCSI buses. An internal fast SCSI bus supports up to seven storage devices. The external bus supports up to seven additional SCSI devices.
- One Apple Desktop Bus (ADB) port for up to three input devices daisy-chained through a low-speed, synchronous serial bus
- Three PCI bus or two NuBus plus two PCI expansion card slots
- Two RS-232/RS-422 serial GeoPort ports, 230.4 Kbits per second maximum (up to 2.048 Mbits per second clocked externally)
- Built-in Ethernet AAUI and 10BaseT connectors
- Sound output port for stereo CD audio and computer-generated sound
- Sound input port for stereo sound input

AC line input

- Line voltage: 100–240 volts AC, RMS single phase (not auto-ranging)
- Frequency: 50–60 Hz
- Power: 600 watts maximum

DC power

- 200 watts maximum

Current type	Total
+5 V	20 A
-5 V	0.5 A
+12 V	8 A
-12 V	0.5 A

Clock and calendar

- CMOS circuitry with long-life 3.6-volt lithium battery (1/2 AA cell)

Keyboard and mouse

- Supports all ADB-compatible keyboards and mice

Operating environment

- Operating temperature: 10°C to 40°C (50°F to 104°F)
- Storage temperature: -40°C to 50°C (-40°F to 122°F)
- Relative humidity: 5% to 95% (noncondensing)
- Altitude: 0 to 3048 m (0 to 10,000 ft)

Dimensions

- Size: 15.8" W X 6.1" H X 15.9" D (402 mm X 155 mm X 404 mm)
- Weight: 23 lb (10.4 kg).

RAM configurations

The PowerWave 604 has eight slots for memory modules (or DIMMs). The computer will work with a number of different memory configurations, from a minimum of 8 MB to a maximum of 512 MB. Follow these guidelines when configuring your system's RAM:

- DIMMs should be installed in identical pairs to allow improved performance from interleaved memory. The DIMMs in a pair must have the same capacity and configuration.
- DIMM slots can accept 8, 16, 32, and 64 MB DIMMs.
- All DIMMs must be 168-pin, fast-paged mode, 70-nanosecond RAM access time or faster. Slower DIMMs will not work reliably. SIMMs from older Macintosh computers are not compatible.

VRAM configurations

Video memory (VRAM) for the two ports on the standard PCI video card is provided in SIMMs installed on the card. This video card comes with 2 MB of VRAM and can be expanded up to 4 MB with 2 MB memory module.

Increasing the computer's VRAM increases the number of colors that can be displayed on a monitor. See the tables in the next section for information about how many colors can be displayed on a monitor of a particular size with different amounts of VRAM.

Monitor resolution/color tables

The following table displays the numbers of colors available to monitors of various sizes connected to the computer's monitor ports..

Table D-1. PCI monitor port color levels

Monitor	Resolution	Colors or Grays	
		2 MB VRAM	4 MB VRAM
12" Color	512 X 384	Millions	Millions
13 or 14" VGA	640 X 480	Millions	Millions
15" Mono Portrait	640 X 870	Thousands	Millions
16 or 17" Color	800 X 600	Millions	Millions
	832 X 624	Millions	Millions
19 or 20" Color	1024 X 768	Thousands	Millions
21" Color	1152 X 870	Thousands	Millions
	1280 X 960	256	Thousands
	1280 X 1024	256	Thousands

Power requirements

Apple Desktop Bus

- Maximum power draw for all devices: 500 mA
- Mouse power: up to 10 mA
- Keyboard power: 25–80 mA (depending on keyboard model)

Audio and telecommunications input devices

Device	Voltage	Current	Power
Microphone	+5 V	20 mA	100 mW
GeoPort Telecom Adapter	+5 V	500 mA	2.5 W

Expansion cards and devices

When you add PCI cards, NuBus cards or internal storage devices, make sure the combined power consumption of all devices meets the following guidelines:

Device	Voltage	Current	Power
	+5 V	3 A	15 W
PCI or NuBus card (per slot)	+12 V	0.5 A	6.0 W
	-12 V	0.1 A	1.2 W
	+5 V	10 A	50 W
PCI or NuBus cards total (5 slot maximum)	+12 V	2.5 A	30 W
	-12 V	0.5 A	6 W
	+5 V	4.5 A	22.5 W
Internal storage device (such as a CD-ROM or hard disk drive)	+12 V	1.7 A	20 W

Appendix E Regulatory Information

This appendix contains information required by regulatory agencies.

FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. See instructions if interference to radio or television reception is suspected.

Radio and television interference

The equipment described in this manual generates, uses, and can radiate radio-frequency energy. If it is not installed and used properly—that is, in accordance with the manufacturer’s instructions—it may cause interference with radio and television reception.

This equipment has been tested and found to comply with the limits for a Class B digital device in accordance with the specifications in Part 15 of FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

You can determine whether your computer system is causing interference by turning it off. If the interference stops, it was probably caused by the computer or one of the peripheral devices.

If your computer system does cause interference to radio or television reception, try to correct the interference by using one or more of the following measures:

- Turn the television or radio antenna until the interference stops.
- Move the computer to one side or the other of the television or radio.
- Move the computer farther away from the television or radio.
- Plug the computer into an outlet that is on a different circuit from the television or radio. (That is, make certain the computer and the television or radio are on circuits controlled by different circuit breakers or fuses.)

If necessary, consult an authorized service provider or consult an experienced radio/television technician for additional suggestions. You may find the following booklet helpful: *Interference Handbook* (stock number 004-000-00493-1). This booklet, prepared by the Federal Communications Commission, is available from the U.S. Government Printing Office, Washington, DC 20402.

Regulatory Information

PowerWave 120/132/150 systems are shipped with an EMI choke, which must be installed on the video cable. See “Connecting the monitor” on page 4 for installation information.

Important: Changes or modifications to your computer not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This product was tested for FCC compliance under conditions that included the use of shielded cables and connectors between system components. It is important that you use shielded cables and connectors between system components to reduce the possibility of causing interference to radios, television sets, and other electronic devices.

DOC statement

DOC Class B Compliance This digital apparatus does not exceed Class B limits for radio noise emissions from digital apparatus as set out in the interference-causing equipment standard entitled “Digital Apparatus,” ICES-003 of the Department of Communications.


Observation des normes—Classe B Cet appareil numérique respecte les limites de bruits radioélectriques applicables aux appareils numériques de Class B prescrites dans la norme sur le matériel brouilleur: “Appareils Numériques”, NMB-003 édictée par le ministre des Communications.

CD-ROM drive

WARNING! Making adjustments or performing procedures other than those specified in your equipment's manual may result in hazardous exposure.

WARNING! Do not attempt to disassemble the cabinet containing the laser. The laser beam used in this product is harmful to the eyes. The use of optical instruments, such as magnifying lenses, with this product increases the potential hazard to your eyes. For your safety, have this equipment serviced only by an authorized service provider.

If you have an internal CD-ROM drive in your computer, your computer is a Class 1 laser product. The Class 1 label, located on the computer, indicates that the drive meets minimum safety requirements. A service warning label is on the CD-ROM drive inside the computer.

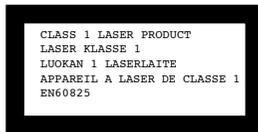

Lithium battery warning

The computer contains a lithium battery to power the clock and calendar circuitry.

CAUTION: Danger of explosion if battery is replaced incorrectly. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

ATTENTION: Il y a danger d'explosion s'il y a remplacement incorrect de la batterie. Remplacer uniquement avec une batterie du même type ou d'un type recommandé par le constructeur. Mettre au rebut les batteries usagées conformément aux instructions du fabricant.

For use in European countries

Use an HAR approved power cord with proper plug configuration.

Bitte nur mit zugelassener HAR-Stromkabel benutzen.

Regulatory Information