



Tech Info Library

A/UX: LaserWriter IINTX Connection Documentation Error

Article Created: 7 September 1989

Article Change History

08/31/92 - REVIEWED

- For technical accuracy.

TOPIC -----

In the A/UX Local System Administration (030-5595-B) manual (page 7-34, step 2), the user is instructed to attach the LaserWriter IINTX to the A/UX host via a SCSI cable in addition to the serial connection. Is this correct? There was no mention of the reason for this connection, nor was there mention in the LaserWriter manual. I have the most recent version of the A/UX documentation.

If this is incorrect, what is the potential damage to systems connected this way?

DISCUSSION -----

The instructions mentioned above are wrong. There is no need to connect the SCSI cable between the LaserWriter IINTX and the A/UX host.

Also, there is no potential damage having the systems connected that way.
Copyright 1989 Apple Computer, Inc.

Keywords: <None>

=====
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 4365