



Tech Info Library

EtherTalk: How To Install Drivers

This article last reviewed: 14 December 1989

TOPIC -----

As I understand it, Apple delivers EtherTalk 2.0 together with the EtherTalk NB Card.

Since EtherTalk 2.0 uses AppleTalk Phase 2, and not every networking and communication product can use AppleTalk Phase 2 -- GatorBox can't, for example -- what should I do if I still need to use EtherTalk 1.2 with the EtherTalk NB Card?

DISCUSSION -----

Apple now ships EtherTalk 2.0 software with all EtherTalk NB Cards. It is possible to install BOTH the EtherTalk 1.2 and EtherTalk 2.0 drivers on a Macintosh II, using the EtherTalk 2.0 Installer and a file on the EtherTalk 2.0 Installer Disk.

To install the EtherTalk 1.2 and EtherTalk 2.0 drivers, follow the installation sequence below:

- 1) Use the Installer on the EtherTalk 2.0 Installer Disk to install EtherTalk 2.0 on the destination Macintosh.
- 2) Open the folder called "Previous Version" on the EtherTalk 2.0 Installer Disk.
- 3) Copy the file "EtherTalk" to the System Folder of the destination Macintosh. This file is the EtherTalk 1.2 driver.

The System Folder of the destination Macintosh now contains both EtherTalk 1.2 and EtherTalk 2.0 drivers. Either one of these drivers may be selected via the "Network" CDEV. The EtherTalk 1.2 driver icon has a single arrow pointing to the left and right; the EtherTalk 2.0 driver has double arrows pointing to the left and right.

Copyright 1989 Apple Computer, Inc.

Keywords: <None>

=====
This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 4962