



Tech Info Library

CD Remote: Changing the Track Order (6/94)

Article Created: 26 April 1994

Article Reviewed/Updated: 9 Jun 1994

TOPIC -----

I have a Power Macintosh 8100/80AV and I'm using CD Remote to play an audio CD. I can create a customized play list, but I'd like to change the playing order of the the tracks. How do I play track 8 before track 2? I think it's possible, but the manual doesn't explain how.

DISCUSSION -----

The Power Macintosh uses CD Remote 4.5, which is identical to the CD Remote used on other Macintosh computers.

After you click on the zoom box to reveal the customized Play List, change the playing order of a particular track by holding down the command key and dragging the track before or after another track as it appears in the Play List.

Article Change History:

9 Jun 1994 - Corrected article. It said option key, and is really command key.

Support Information Services

Copyright 1994, Apple Computer, Inc.

Keywords: kppc

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 15213