



Tech Info Library

System 7: Easy Access

Article Created: 7 January 1993

TOPIC -----

I'm getting a whistle noise along with a "U"-shaped icon (an arrow points downward in the center of this "U") that suddenly appears to the right of the applications menu.

DISCUSSION -----

The action that causes this is pressing the Shift key five times. The icon and whistle sound are a feature of Easy Access. It's a control panel item that provides alternative ways to move the pointer and use the keyboard. You can find more information on its features and use in the Macintosh Reference Manual, pages 353-361.
Copyright 1993, Apple Computer, Inc.

Keywords: SYS7

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 11241