



Tech Info Library

LaserWriter 16/600 PS: Windows NT Limited to Printing (6/95)

Article Created: 9 June 1995

* RESTRICTED: Apple Internal and Support Providers Only *
Not For General Public Release

TOPIC -----

How do I connect my LaserWriter 16/600 PS to a Windows NT Server?

DISCUSSION -----

The LaserWriter 16/600 PS has limited compatibility with Windows NT. It only allows you to print from Windows NT. This printing compatibility allows the administrator to install the PostScript printer description file (PPD) for the LaserWriter 16/600 PS onto a Windows NT system. Once the PPD is installed, you can print to the printer from Windows NT.

The procedure for doing this is in the Apple LaserWriter 16/600 PS User's Guide, chapter 7, Installing software for Windows NT section and they are also provided below. These instructions are for Windows NT 3.1. The administrator should be able to install on Windows NT 3.5 as well but the procedure is a little different. The procedure for NT 3.1 is:

Step 1

Ensure Windows NT is running.

Step 2

Open the Print Manager icon.

Step 3

Select Create Printer from the Printer pop-up menu.

Step 4

Select Other from the driver list box. Windows NT prompts you to insert a disk.

Step 5

Insert Windows Printer Disk 2 of the disks that come with the LaserWriter 16/600

PS in the appropriate drive and click OK.

Step 6

Follow the instructions that appear on the screen.

Support Information Services

Copyright 1995, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 17919