



Tech Info Library

CLW 12/600 PS: Config RPRINTER on Netware 3.1.x (10/96)

Article Created: 2 November 1995

Article Reviewed/Updated: 23 October 1996

TOPIC -----

This article provides the documentation for setting up a Color LaserWriter 12/600 PS or Color LaserWriter 12/660 PS printer in RPRINTER mode on a Netware 3.12 server. This information is not in the printer User Manual.

DISCUSSION -----

Step 1 - Apple Printer Utility

=====

- 1) From a Macintosh Launch Apple Printer Utility
- 2) Make sure that RPRINTER is selected
- 3) Enter a name into the Remote PSERVER name
Note: Write down the Remote PSERVER name for later
- 4) Select Port configuration, ensure that Netware is set to ON
- 5) Exit the Apple Printer Utility

Step 2 - Configure with PCONSOLE

=====

NOTE: The Color LaserWriter 12/600 PS or Color LaserWriter 12/660 PS must be configured as printer "0". This is not an option because other printer number assignments do not work. This may require recreating configurations for other printers being serviced by PSERVER.

- 1) Run PCONSOLE from a DOS Client
- 2) Select Print Server Information
- 3) Press INS to create new print server
- 4) Enter the Print Server name from Step 1
- 5) Press Return
- 6) Select Full Name press enter
- 7) Enter: RPRINTER <Any Printer Name> <0> - and press enter
Note: This printer requires the first Printer definition, that is "0", to work properly, also write down the printer name for later
- 8) Select Print Server Configuration
- 9) Select Printer Configuration
- 10) Select printer 0 not installed

- 11) Enter the name enter into "Full Name"
- 12) Select Type - press return
- 13) Select Remote other unknown - press return
- 14) Press escape back to Available Options - answer yes when prompted to save
- 15) Select Print Queue Information
- 16) Press INS
- 17) Enter any name for a queue name
Note: Write down the Queue name for later
- 18) Press enter
- 19) Press enter on that queue name
- 20) Select Queue Servers press enter
- 21) Press INS
- 22) Select the queue server name that you entered earlier
- 23) Press return
- 24) Press ESC until you are back to available options - Save any changes if asked
- 25) Select Print Server Information Menu press return
- 26) Select Print Server Configuration
- 27) Select Ques Serviced by Printer
- 28) Press return twice
- 29) Press INS
- 30) Select the Queue that you have setup for this printer - press enter twice
- 31) Escape out of PCONSOLE - saving changes if asked
- 32) At the Netware server:
Enter: LOAD PSERVER <REMOTE-PSERVER-NAME>
The REMOTE-PSERVER-NAME will be the same from Step 1

Step 3 - Restart Printer

If the printer does not show waiting print job on the PSERVER screen, restart the printer.

Step 4 - Print to the Queue

- 1) Enter: capture q=q_name/no banner/ti=5
- 2) z:
- 3) print fontlist.ps

Article Change History:

23 Oct 1996 - Added Color LaserWriter 12/660 PS.
05 Mar 1996 - Removed LaserWriter 16/600 PS from article.
05 Feb 1996 - Updated Step 2, and added LaserWriter 16/600 PS printer.

Keywords: knts

=====

This information is from the Apple Technical Information Library.

19961023 16:31:12.00

Tech Info Library Article Number: 18868