



Tech Info Library

LaserWriter Pro 630: Changing Default Paper Tray (4/95)

Article Created: 4 May 1993

Article Reviewed/Updated: 21 April 1995

TOPIC -----

If I install a 500-sheet feeder on a LaserWriter Pro 630, in a standard MS-DOS environment how do I make the 500-sheet tray the default tray?

DISCUSSION -----

The PostScript code below changes the default paper tray to the 500-sheet tray. (Remember, PostScript code IS case-sensitive.)

```
%=====
% Begin PostScript Code
%
serverdict begin 0 exitserver
statusdict begin 2 setdefaultpapertray end
%
% end PostScript Code
%=====
```

CAUTION:

Use this PostScript code at your own risk. You are responsible for the support of any problems associated with changing the default tray. You should also inform others using the printer that you have changed the default tray. Changing the default tray on the printer may cause the paper out LED to light if there is no paper present in the default tray, or if the wrong size paper is used in the tray. When this happens, there is nothing wrong with the printer's hardware.

To change the default tray to another tray, change the number before the "setdefaultpapertray" operator to one of the following values.

Value	Tray Selection
0	250 Sheet Cassette
1	Multi-purpose tray
2	500 Sheet Cassette
3	Envelope tray

After downloading the code, you can verify that the change was made by printing the configuration page.

Article Change History:

21 Apr 1995 - Added Caution message.

Support Information Services

Copyright 1993-95, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 12024