



# Tech Info Library

## LaserWriter Pro 630: No Tray Switching With Windows (3/94)

Article Created: 21 March 1994

TOPIC -----

Is there a way to specify which tray to use for the first page, and a different tray for the remaining pages of the print job with a LaserWriter Pro 630 using Windows?

DISCUSSION -----

The ability to control tray selection for the "first" and "remaining" pages is a feature of PostScript level 2. The current Windows driver being distributed by Microsoft (PScript.drv v3.5x) is only a PostScript level 1 driver.

We believe Adobe sells a Windows version of their PS Printer driver which is a PostScript level 2 driver. You may want to verify with Adobe that their driver supports this specific feature you are looking for.

Support Information Services  
Copyright 1994, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 14767