



Tech Info Library

LaserWriter Pro 630: Changing Paper Options Using PCL (1/95)

Article Created: 24 January 1995

TOPIC -----

What are the PCL escape codes to change paper trays on the LaserWriter Pro 630 printer?

DISCUSSION -----

Changing Paper Trays

=====

The HP PCL escape code sequence for selecting paper trays is:

```
<esc>&l#h
```

where <esc> = escape character

where l = lower case L

where # = paper tray selection below

<esc> = escape character

l = lowercase L

= refer to following values below:

0 - source current (default)

1 - 250 sheet cassette

2 - Multipurpose tray

4 - 500 sheet cassette

6 - Envelope Feeder

For example, if you wanted to use the 500 sheet cassette, you would use the following escape code:

```
<esc>&l4h
```

Changing Page Size

=====

The HP PCL escape command for selecting the page size is:

```
<esc>&l#A
```

<esc> = escape character

l = lower case L

= refers to the following page sizes:

- 2 - letter
- 3 - legal
- 1 - executive
- 26 - A4
- 80 - Monarch Envelope
- 81 - Comm. 10 Envelope

For example, if you wanted to print on a legal-sized page you would send:

<esc>&l3A

Support Information Services
Copyright 1995, Apple Computer, Inc

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 17052