



Tech Info Library

LW Pro 810: Control Panel Menu & Options Description (8/94)

Article Created: 1 October 1993

Article Reviewed/Updated: 23 August 1994

TOPIC -----

The printer's control panel settings are grouped into several menus. This article describes the menus & options in more detail.

DISCUSSION -----

- The Input Port menu: allows you to select the way your printer communicates with the host.
- The Paper Source menu: this menu is used to select how your printer will use its paper cassettes, manual feed tray, and optional multimedia power feeder.
- The PostScript Resolution menu: this lets you set your printer's resolution to 300, 400, 600, or 800 dpi.
- The Miscellaneous menu: contains a variety of printer settings.

The following table shows the menus, the options on each menu, and the values you can select. Default values are marked with an asterisk (*).

MENU	Sub-menu	Option	Values
-----	-----	-----	-----
Input Port	RS-232	RS-232 Enable	Yes, No
		RS-232 Printer Type	PostScript* LJETIIP
		Baud Rate	300, 600, 1200 2400, 4800, 9600*, 19200, 38400
		Parity	None*, Even, Odd, Mark, Space

	Flow Control	XON-XOFF*, DTR
	Stop Bits	1* or 2
	Data Bits	8* or 7
LocalTalk	LocalTalk Enable	Yes, No
	Printer Type	PostScript or LJETIIP

Paper Source	Tray 1, Tray 2, Tray 3 Manual Feed, Auto Cascade MM Power Feeder
--------------	---------------------------------------------------------------------------

NOTE: When the Auto Cascade option is selected, the printer uses any of the selected paper trays when the first one runs out of paper. Auto Cascade works only if all paper trays in the set you select contain the same size paper. If one of the selected paper trays contains a different size paper, the LaserWriter Pro skips it.

Miscellaneous	Restore Factory Setup	
	Exit Jam Reprint	Enable*, Disable
	Startup Page	Enable*, Disable
	SCSI Delay	Off*, 20, 40, 60

PostScript Resolution	300, 400, 600, 800 (dots per inch)
-----------------------	---------------------------------------

NOTE: If HPLJIIIP is selected as the printer type, the printer always prints at 300 dpi and this menu selection has no effect.

NOTE: Some settings can be selected using either the printer control panel or the printer software - for example the LaserWriter Utility program. The printer uses the most recent setting. For example, if you select 800 dpi resolution in the LaserWriter Pro utility software and then you select 600 dpi resolution on the control panel, the printer prints at 600 dpi.

Article Change History:
23 Aug 1994 - Review for accuracy.

Support Information Services
Copyright 1993-94, Apple Computer, Inc

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 13680