



Tech Info Library

LaserWriter Pro 810: If It Won't Select Correct Tray (1/94)

Article Created: 31 January 1994

TOPIC -----

I'm having a problem getting my LaserWriter Pro 810 to select a specific paper tray.

DISCUSSION -----

The cure is to restore factory default settings. Here's how:

- 1) Turn the printer on and wait until it comes ready.
- 2) Locate the control panel and press the On-line button to force the printer "Off-line".
- 3) Press the Menu button.
- 4) Press the down arrow until "Misc." appears in the display, then press Enter.
- 5) Press Enter again to select "Restore Factory Setup".
- 6) Press Enter when the "Factory Setup" question appears.

When you've done all this, the printer will display "Confirmed" and run a self-test. The printer will return to the ready state once the self-test is complete.

Support Information Services
Copyright 1994, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 14608