



# Tech Info Library

## LaserWriter Pro 810: Changing Page Size & Trays in PCL (2/95)

Article Created: 13 October 1994

Article Reviewed/Updated: 21 February 1995

TOPIC -----

What are the PCL escape codes to change paper trays on the LaserWriter Pro 810. Also, is there a way to select page size instead of specific paper trays in PCL?

DISCUSSION -----

### Changing Paper Trays

-----  
The HP PCL escape code sequence for selecting paper trays on the LaserWriter Pro 810 follows below. Before sending the PCL code to the printer, the printer control panel "Paper Source" setting must have the asterisk on "Tray 3". In other words, set the paper source for Tray 3.

```
<esc>&l#h
```

where <esc> = escape character  
where l = lower case L  
where # = paper tray selection below

- 1 - upper tray
- 4 - middle tray
- 5 - lower tray

For example, if you want to use the paper in the lower tray, you would use the following escape code:

```
<esc>&l5h
```

### Changing Page Size

-----  
The HP PCL escape command for selecting the page size is:

```
<esc>&l#A
```

-----  
<esc> = escape character

l = lower case L  
# = refers to the following page sizes:  
. 2 - letter  
. 3 - legal  
. 1 - executive  
. 26 - A4  
. 80 - Monarch Envelope  
. 81 - Comm. 10 Envelope

For example, if you wanted to print on a legal-sized page you would send:

<esc>&l3A

Article Change History:

20 Feb 1995 - Added additional information to Paper Trays section.  
20 Oct 1994 - Added page size to the discussion.

Support Information Services  
Copyright 1994-95, Apple Computer, Inc

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 16528