



# Tech Info Library

## LaserWriter Pro, HP Emulation Mode: Switching Paper Bins (3/93)

Article Created: 10 March 1993

TOPIC -----

How do I switch paper bins on a LaserWriter Pro in HP emulation mode?

DISCUSSION -----

If you want to switch paper bins on a LaserWriter Pro in HP emulation mode, you must send an escape code sequence directly to the printer. One way to do this is to type the escape code sequence into a text file. This is the HPCL escape code sequence to switch between paper bins:

```
ESC&l#H
```

where # is the bin selection value and the letter after the "&" is lowercase L.

```
0    is the bin selection value for the default paper tray.
1    "                " for the upper tray.
2    "                " for the manual feed tray.
4    "                " for the lower tray.
6    "                " for the envelope feeder.
```

For instance, to select the 500 page cassette (or lower tray), send "ESC&l4H" to the printer.

Copyright 1993, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 11881