



Tech Info Library

LaserWriter Pro: Connecting to a NeXT Computer (8/93)

Article Created: 27 August 1993

TOPIC -----

How can I connect a NeXT computer to my LaserWriter Pro 600?

DISCUSSION -----

From a hardware standpoint the only requirement for a serial RS232 connection to the printer would be a null modem cable. On an AppleTalk network, you can connect via the printer's LocalTalk port. Use NeXTSTEP 3.0 which reportedly includes an Appleshare client which provides access to PostScript printers on an AppleTalk network.

On the LaserWriter Pro itself, you want to set the thumbwheel switch to position 0 which sets the printer for PostScript, 9600 baud, 8 data bits, 1 stop bit, and XON/OXFF handshaking.

Contact NeXt for more information. To locate a vendor's address and phone number, use the vendor's name as a search string.
Copyright 1993, Apple Computer, Inc.

Keywords: <None>

=====

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 13096